



Network Video Recorder

User's Manual v1.7.5

Model: **SVR-104/108/SVR-116**

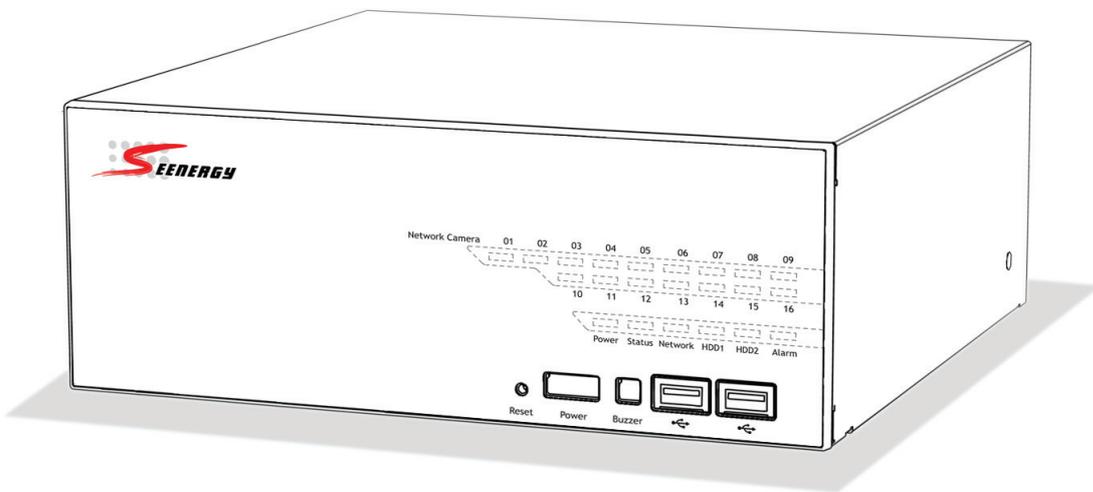


Table of Contents

Product Description	6
Install Hard Disk	7
Hardware Illustration	10
I/O Ports and RS-485	12
LEDs Definition	13
Connect to the NVR	15
1. Live View	19
1.1 Retrieve camera's video stream	21
1.2 Retrieve camera's status	21
1.3 Perform Sequence Viewing	22
1.4 PTZ Control	23
1.5 Perform PTZ Preset Viewing	24
1.6 Live Video Control Buttons	26
1.7 Change Web UI Display Language	29
1.8 Live View Through iPhone	30
1.9 Live View through Blackberry Phones	33
2. Playback	36
2.1 Methods to Search Playback Videos	37
2.2 Export Playback Videos to AVI Files	43
2.3 Play Exported AVI Videos With NVR Media Player	45
2.4 Open Event Snapshot Images with NVR Media Player	46
3. System Setup	47
3.1 System Configurations	47
3.1.1 Network Settings	47
3.1.2 DDNS Service	49
3.1.3 Time and Date	55
3.1.4 User Account	56
3.1.5 Group Privilege	57
3.1.6 Disk Setup	59
3.2 Channel Configurations	60
3.2.1 Add a Camera	60
3.2.2 OSD Settings	63
3.2.3 PTZ Preset Settings	64
3.2.4 PTZ Preset Sequence	66
3.2.5 E-Map Setting	67
3.2.5.1 Local Map Setting	67
3.2.5.2 Google Map Setting	69
3.3 Event Configurations	71
3.3.1 General Settings	71
3.3.2 I/O Settings	72
3.3.3 Event Servers	74
3.3.4 Event Triggers	77
3.4 Recording Configurations	79
3.4.1 General Settings	79
3.4.2 Schedule Recording	82

3.5 System Options	84
3.5.1 Device Information	84
3.5.2 Logs and Reports	85
3.5.3 Maintenance	85
Reboot the NVR	86
Reboot NVR At a Specific Time Automatically	87
Firmware Upgrade	88
Reset the NVR to Factory Default	90
3.5.4 DO Status	91
3.5.5 Disk Status	91
3.5.6 USB Backup	92
3.5.7 UPS Configuration	98

Copyrights & Trademarks

Copyright

SEEnergy Corp © 2011

Trademarks

SEEnergy SVR-104/108/116 Network Video Recorder (NVR) is a registered trademark of SEEnergy Corp.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

All other trademarks mentioned in this document are trademarks of their respective owners.

Disclaimer

This document is intended for general information purposes only, and due care has been taken in its preparation.

Any risk arising from the use of this information rests with the recipient, and nothing herein should be construed as constituting any kind of warranty.

SEEnergy reserves the right to make adjustments without prior notification.

All names of people and organizations used in this document's examples are fictitious. Any resemblance to any actual organization or person, living or dead, is purely coincidental and unintended.

System Requirements

The following are minimum system requirements for the system to operate Embedded Network Video Recorder (ENVR):

Operating System

Microsoft® Windows® 2000 Professional, Windows® XP Professional SP2, Windows Vista, Windows 7, Windows® 2003 Server, or Windows® 2008 Server

Browser

Microsoft Internet Explorer 7 or above

CPU

Minimum Intel® Pentium® 4 2.4 GHz or higher (Dual Core is recommended)

RAM

Minimum 1 GB of RAM, 2GB or above is recommended

Network

Minimum 10/100 Ethernet (Gigabit Ethernet is recommended)

Graphics Adapter

AGP or PCI-Express, minimum 1024×768, 16 bit colors.

(We highly recommend to work above the 1024 x 768 resolution to get the full experience of the software)

- ***Make sure your display DPI setting is set to default at 96DPI***
- ***To set DPI value, right-click on desktop, choose "Settings" tab >> "Ad-***

Contents Inside the Installation CD

- Adobe Acrobat Reader
- Smart Device Search Utility
- Pi-Vu Central Basic CMS software
- NVR Media Player
- User's Manual
- Quick installation Guide
- Datasheet


Product Description

The Embedded Network Video Recorder is designed for use within a surveillance system, and performs recordings and playbacks pictures from network cameras in the system. It is a recording device using a hard disk drive to record camera pictures instead of using video tapes so that pictures recorded by repeated overwriting will not experience deterioration of the recorded picture quality. Up to 4 (for SVR-104) or 8 (for SVR-108) or 16 (for SVR-116) cameras can be connected via a network and it is possible to record their camera pictures. It is possible to perform the settings or operate the NVR using a web browser installed on a PC connected to a network, or remote controller. Recorded video can be played back from remote site by a PC. Up to 4 PCs (web browsers) can access this unit concurrently and it is possible to perform the settings and operate this unit. The NVR is compatible with most major brand cameras and its ability to automatically search and find the available cameras on the network can greatly reduce the user effort when expanding the system.

- **Advance PTZ Control**
- **Various Types Event Alerts**
- **Pure Web Based Administration**
- **Linux-embedded Operating System**
 - **Export Recorded Videos to AVI**
 - **Compatible with Major Brand Cameras**
 - **High Quality Live/Playback Videos**
 - **Smart Camera Search**

Install Hard Disk

Start by removing the screws on the side:

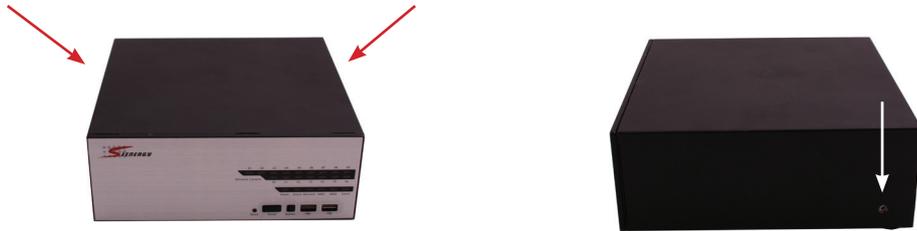

Push the top housing forward.




Then lift it up.




- The NVR supports SATA I or SATA II hard disks.
- The NVR supports max. 1.5TB per hard disk and it supports total of 2 hard disks (3TB).

There is a cable connected between the front LED board and the main board.

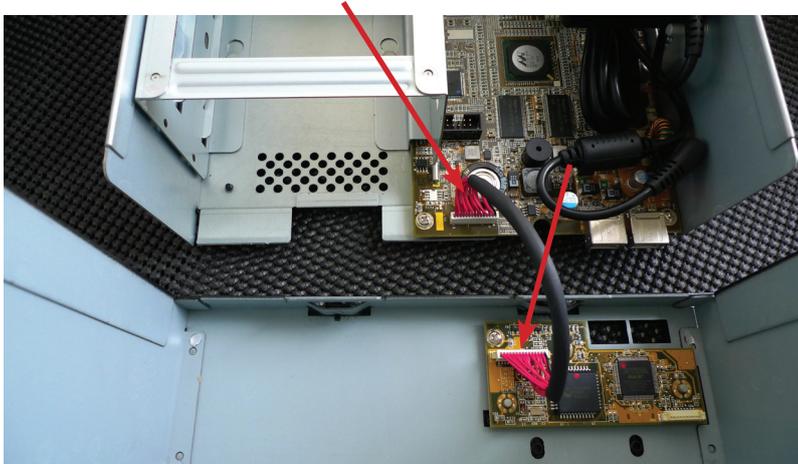

You can remove it from the main board or simply put the top housing on the side like shown below.

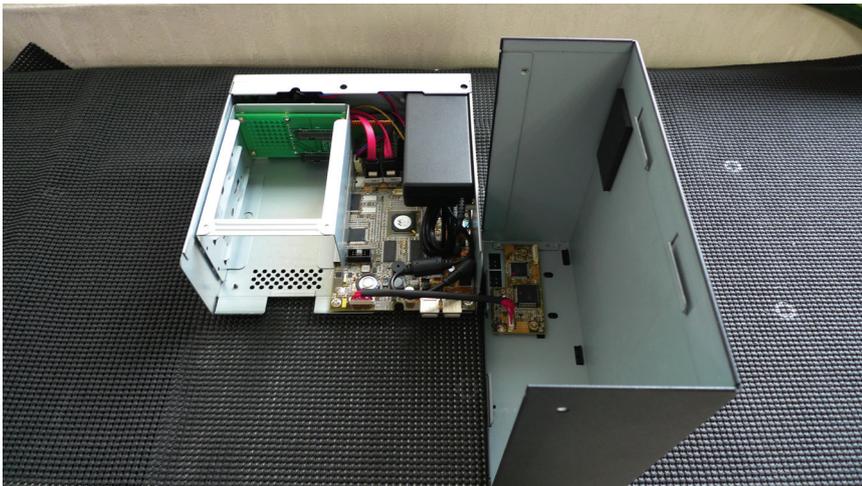



Next, slide the hard drive into the tray.



Make sure the SATA connectors are correctly aligned with each other.



Secure the hard drive with the tool-less screw provided in the box.

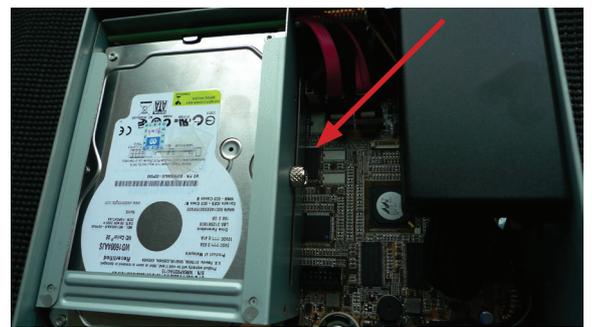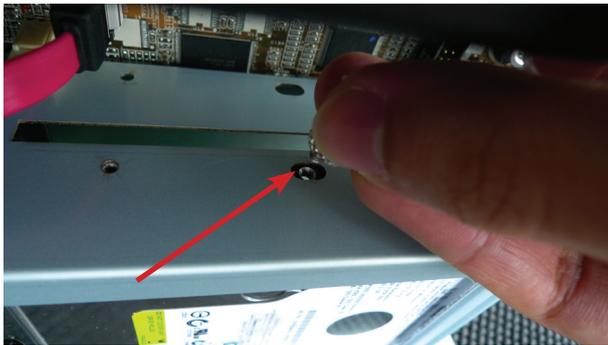


Place the top housing back and secure it with the bottom housing.




Hardware Illustration (Front)


16 Channel

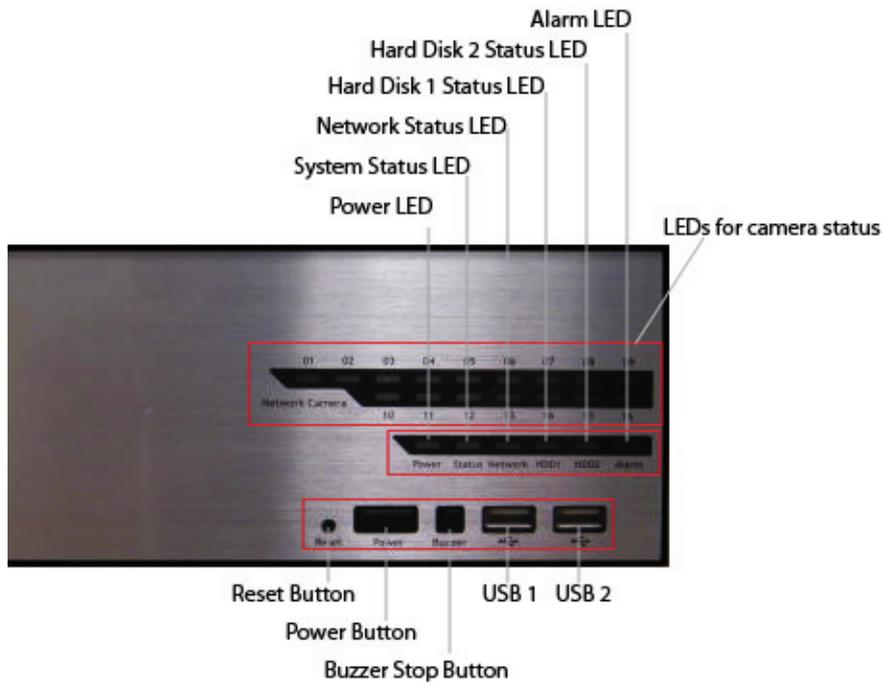


8 Channel

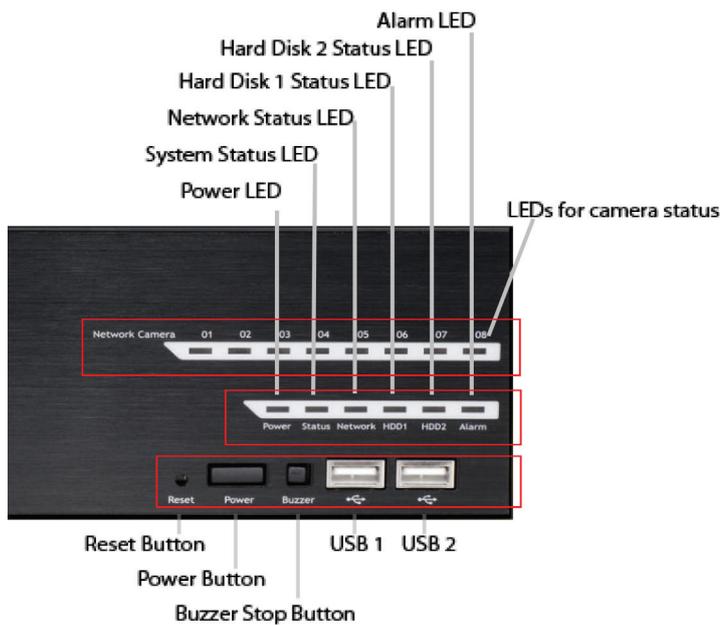

4 Channel

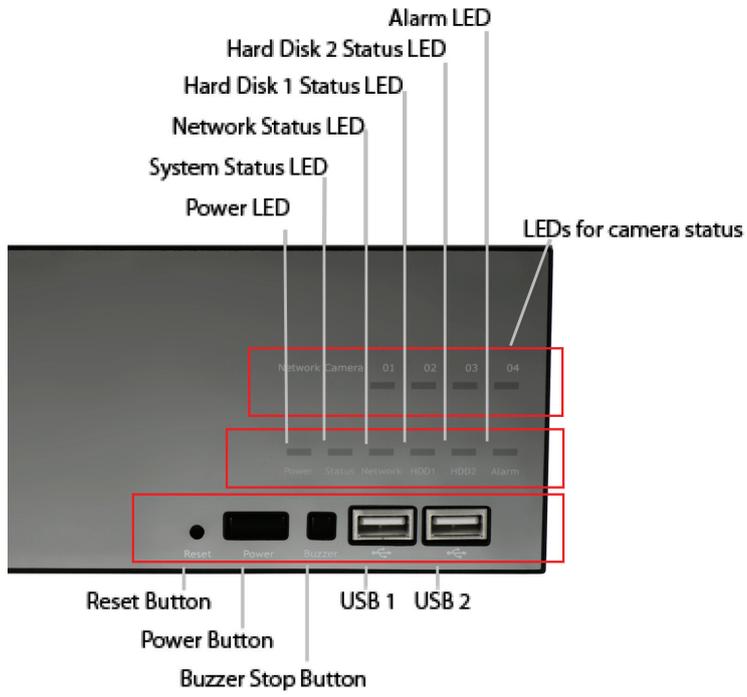

I/O Ports and RS-485 (Rear)

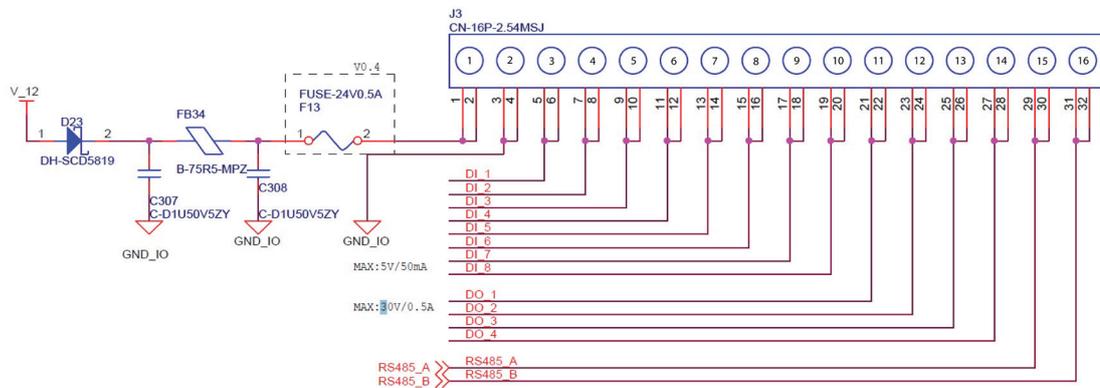


Pin	Signal
1	12V DC
2	GND
3~10	Alarm input
11	Out1
12	Out2
13	Out3
14	Out4
15	RS485+
16	RS485-

LEDs Definition


4 Channel



8 Channel

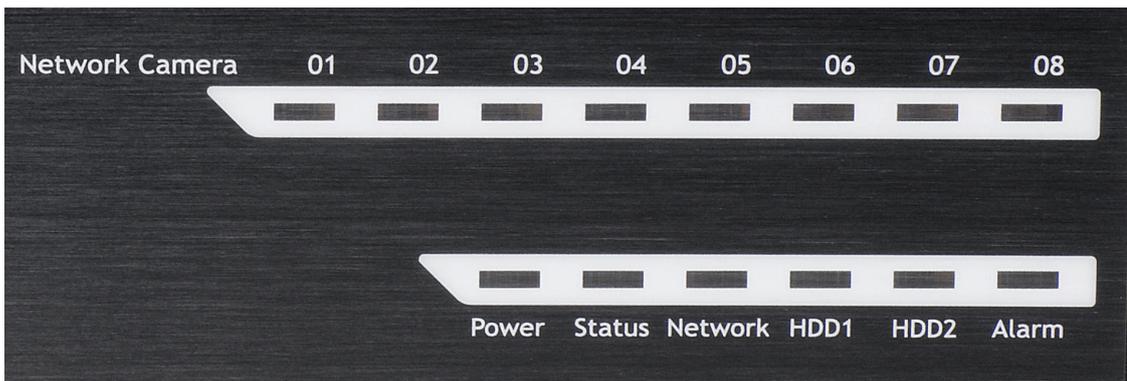

16 Channel

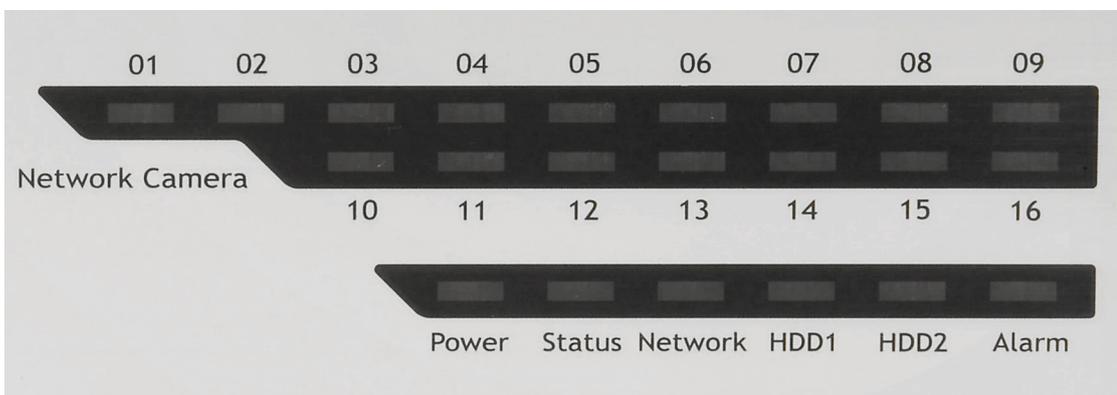

LEDs Definition

HDD x 2	Green	Solid green when the hard disk is mounted and being accessed.
	Red	Solid red for disk fail.
	Amber	Solid amber when recording is in process. Blinking when recycling.
Network	Amber	Solid amber for activity on a 1G bps network.
	Green	Solid green for activity on a 10/100 Mbps network.
Status	Amber	Blinking during firmware upgrade.
	Green	Shows solid green for normal operation. Blinking green when firmware upgrade is done.
	Red	Flashes red for failed firmware upgrade.
Power	Green	Normal operation.
	Red	System off (power adapter remains plugged in).
	Amber	Blinking amber indicating device is initializing.
Alarm	Red	Blinking when an alarm occurs.
	None	When alarm is reset.

Camera LED	Green	Solid green, live connected with no event or recording activity.
	Amber	Blinking amber, manual or event recording is being performed.
	Amber	Solid amber, schedule or continuous recording is being performed.
	Red	Recording is set but no video from camera.

Connect to the NVR

There are various ways you can connect to the NVR and below are the suggested methods for different network setup:


- The NVR is placed in a network with a DHCP server: Connect to the NVR by using **"SEEnergy Device Search" Utility**
- The NVR is placed in a network without DHCP server (or you are connecting to it directly): **Access NVR with its default IP**

Use SEEnergy Device Search Utility

When the NVR is on a corporate network, or a local area network where a DHCP server is already present. Run the "SEEnergy Device Search" utility from a computer which is also on the same network and locate the NVR via its IP address assigned by the top-level DHCP server.


1.

Network gateway as the DHCP server

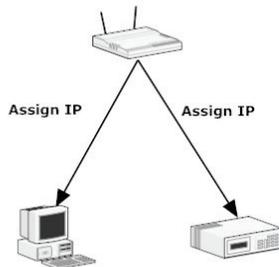


2.


A separate DHCP server in the network

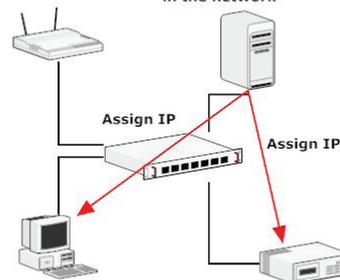


To begin, launch the "SEEnergy Device Search" utility from the CD and proceed with the installation:

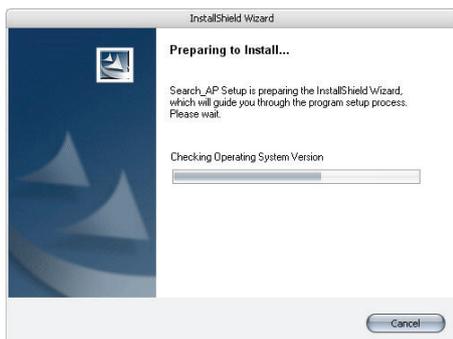


Once the installation is complete, check the "Launch the Search AP" option and click "Finish":

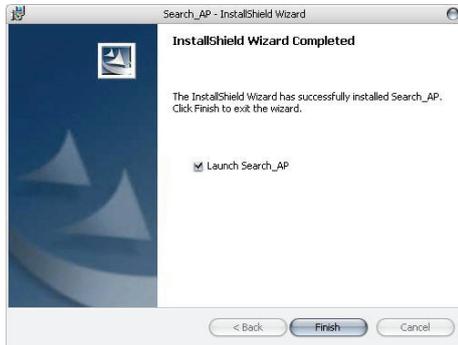

The search should start automatically and its status should be displayed:

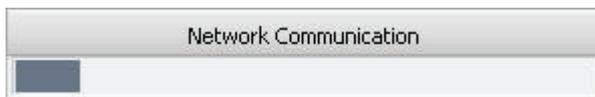


The NVR should be located and its IP address should be displayed: Double-click on it and the program should automatically access the NVR's web administration page from your default browser

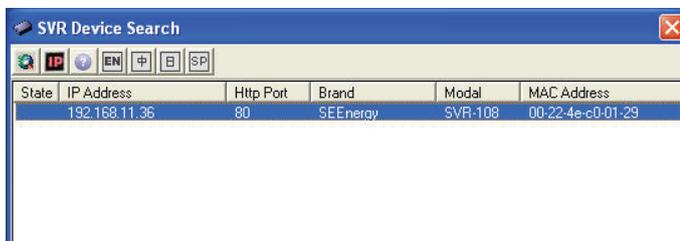


You may change NVR's IP address by click on the button highlighted below.



You will be prompted for the NVR's login information before proceeding to change device's IP address.

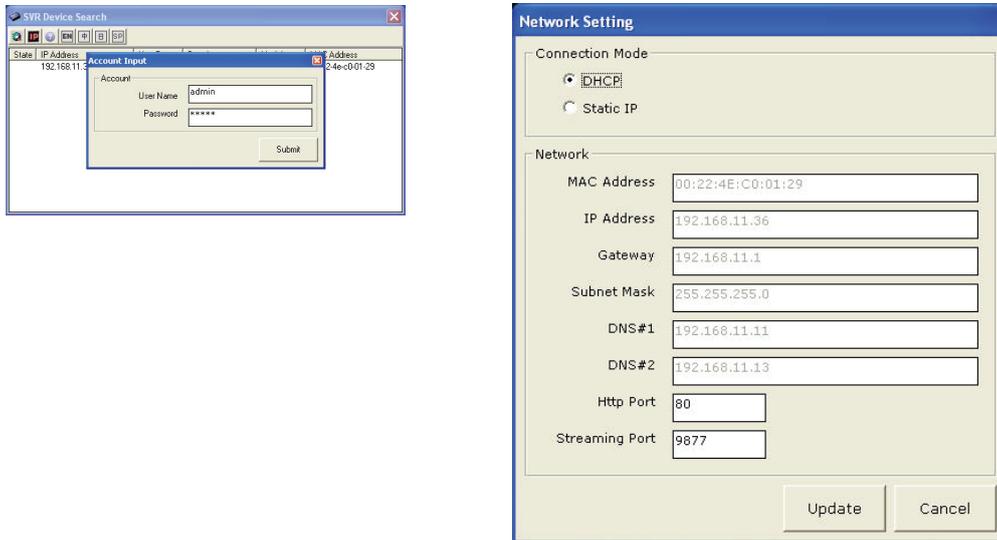

You may click on the button highlighted below to perform search again. Or double-click on any of the search results to access NVR's web administration page

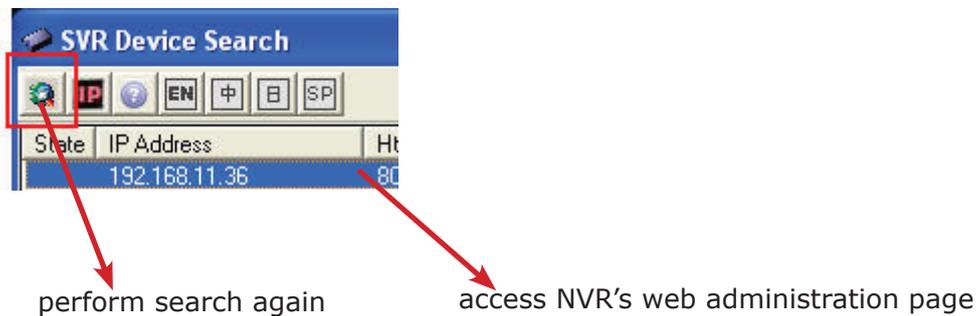


You should be prompted for the NVR's username and password. Enter its default username "**admin**" and password "**admin**" and then click "OK" to enter the system




Access NVR with its default IP address

The NVR comes with a pre-configured static IP "**192.168.101.50**". However, it is only used when there is no DHCP server presented in the network. The NVR will turn on its DHCP server function and act as the DHCP server in the network. To connect to the NVR, use a PC that is on the same network over a switch or hub, or connect the PC directly to the NVR using a crossover CAT5 Ethernet cable.

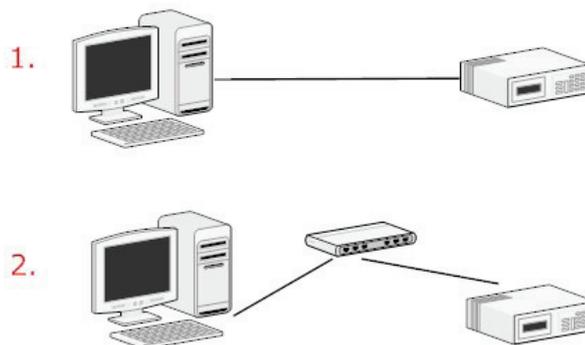


The PC that is connected directly to the NVR (or within the same local area network) should receive an IP from it. Simply access the NVR from your web browser with its IP address

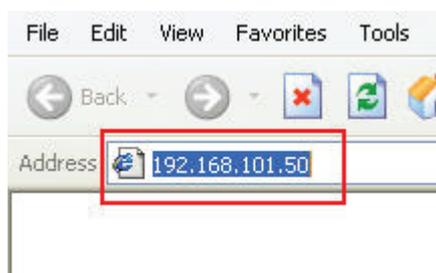

Again, you should be prompted for the username and password. Enter its default username "**admin**" and password "**admin**" and then click "OK" to enter the system



1. Live View SVR-116

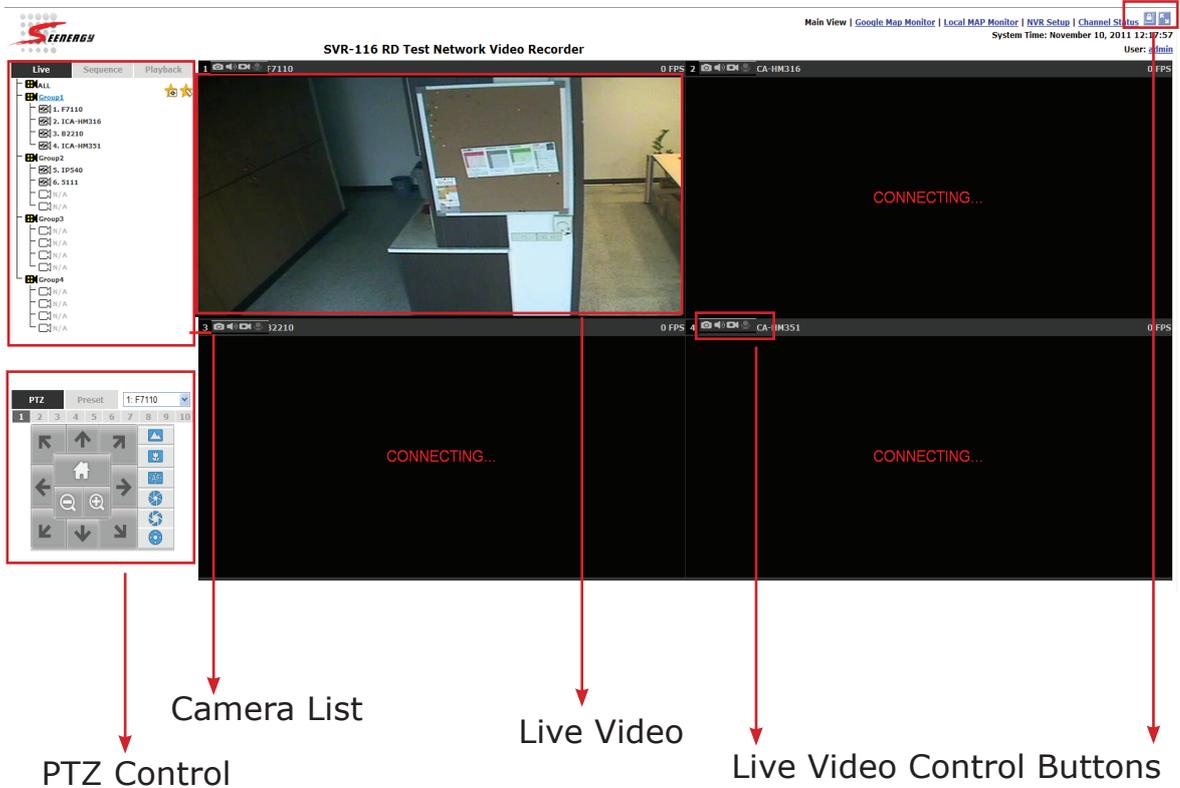

SVR-108



The 8 channel NVR comes with a 8-video split window view with one video displays on a larger window. Select a channel from the drop-down menu to display its video on the larger split window. You can also double-click on any of the smaller one to display its video to the larger window.


SVR-104



The "Live View" page provides the following functions:


- Retrieve camera's video stream
- Retrieve camera's status
- Perform Live Sequence Viewing
- PTZ Control
- Perform PTZ Preset Sequence viewing
- Perform manual recording
- Take snapshot
- Receive audio of a video stream
- Send audio
- Control "Buzzer"
- Change web UI display language

If you are using Windows Vista or Windows 7, please make sure you open Internet Explorer with the "Administrator" privilege or log in to Windows with "Administrator" account.

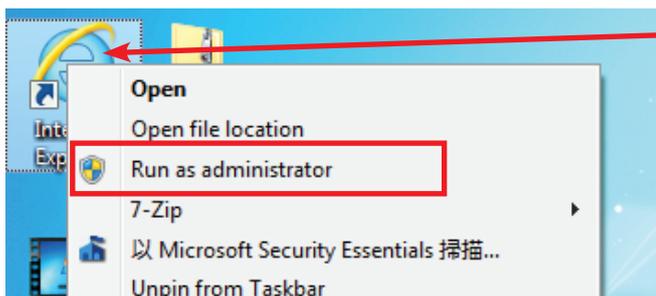

Right-click Internet Explorer

1.1 Retrieve camera's video stream

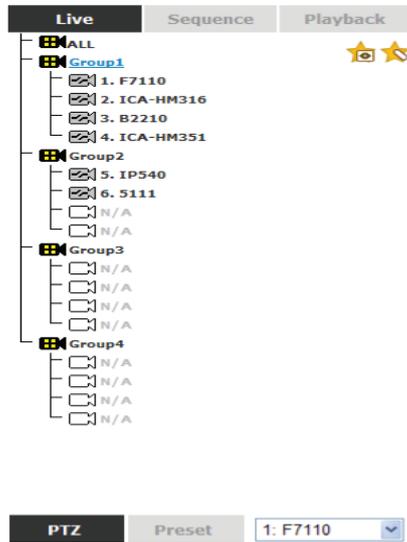

The camera list is expanded and displayed on the Live View page.

- Click "All" to display videos in the 8-video mode (SVR-108) or 16-video mode (SVR-116)
- Click on a "Group" (ex. Group 1) to display videos from cameras under that group in quad view
- Click on any camera to display video in single-view mode

1.2 Retrieve camera's status

The camera list can show each camera's current status. Each status is represented with different colors and their meanings are explained on the left



Camera is connected



Camera is NOT connected



This channel has event triggered and is recording event



Camera is current performing recording



This channel has NOT been configured with any camera


1.3 Perform Sequence Viewing

Sequence view is a function that allows you to view multiple video streams from certain cameras in sequence automatically without having to select them one by one.


To perform sequence view, select "SEQ View" from the upper-left hand corner



Next, select one or more camera(s) or camera group(s) for sequence viewing

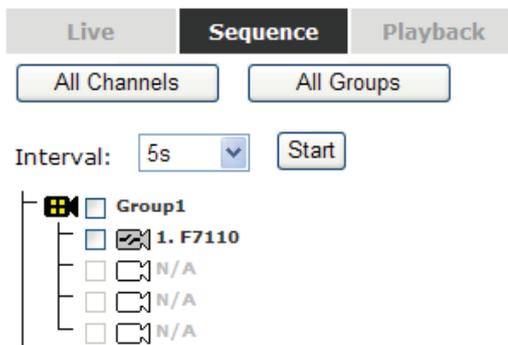

Then select dwell interval from the drop-down menu

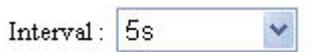

Finally click "Start" to start sequence viewing

** Click "All Channels" to quickly select all available channels and start sequence view in single-view mode.*

Click "All Groups" to quick select all available groups and start sequence view in quad-view mode

Or simply select the desired channels and press "Start" to start sequence view

The "All Group" button is not available in 4Ch NVR as it only has one group

1.4 PTZ Control

PTZ control provides functions to pan, tilt, zoom a PTZ camera as well as the ability to adjust camera focus and iris



Camera(s) that are currently being selected for live viewing will be listed in the PTZ drop-down menu. Simply select a camera then use the PTZ control panel to control the camera



The bar shown below allows you to control the pan/tilt speed



1.5 Perform PTZ Preset Viewing

There are three functions provided in the "Preset" section:

- Perform preset point viewing of a particular camera
- Auto pan a particular camera
- Perform preset point sequence viewing



Preset Point Viewing

Start by selecting a PTZ camera from the drop-down list:



Its available PTZ preset points will be listed in the drop-down list shown below:




Select a preset position from the drop-down list and click "Go to" to move the live view to that position

Auto Pan Viewing

Start by selecting a PTZ camera from the drop-down list:




Use the Auto Pan control buttons to pan right, left and stop auto pan

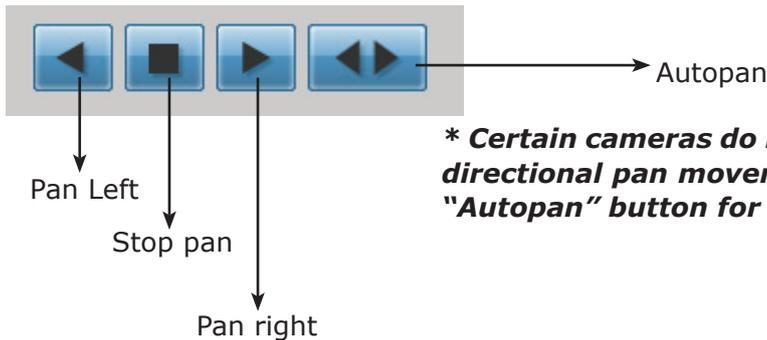


Preset Point Sequence Viewing

This function allows you to view multiple preset points from a video of a camera without having to select them one by one. Once you have defined the preferred preset points in **"Channel Configurations" >> "PTZ Setting" >> "PTZ Sequence"** under the **"Setup"** menu, click **"Start"** in the lower-left hand corner in Live View under **"Preset"** and the recorder will begin to display videos from those preset points in sequence automatically until you click **"Stop"**

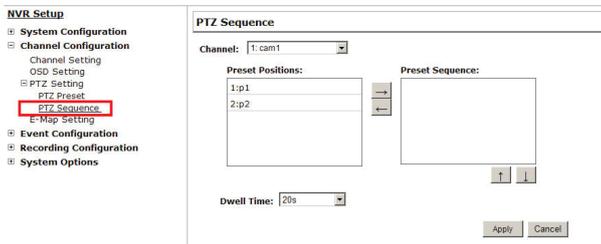


"In the Setup page"

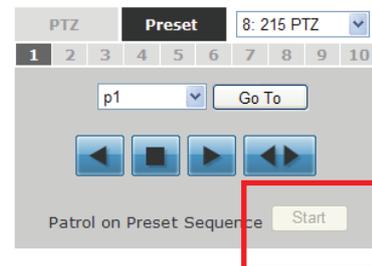

In the Live View

1.6 Live Video Control Buttons

Each live video window comes with control buttons with functions described below:

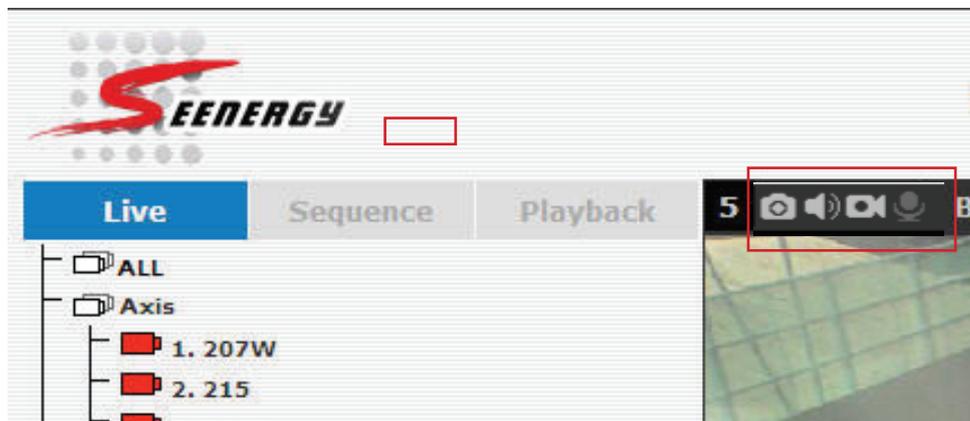


-  Take a snapshot of a live video
-  Turn on/off audio of a live video
-  Start/stop recording of a live video (manual recording)
-  Audio post function



-  Full screen view of a live video
-  Keep aspect ratio and true size
-  Keep aspect ratio

Take a snapshot of a live video


To take a snapshot of a live video, click the  button and the snapshot of the video will be displayed in a pop up window shown like below

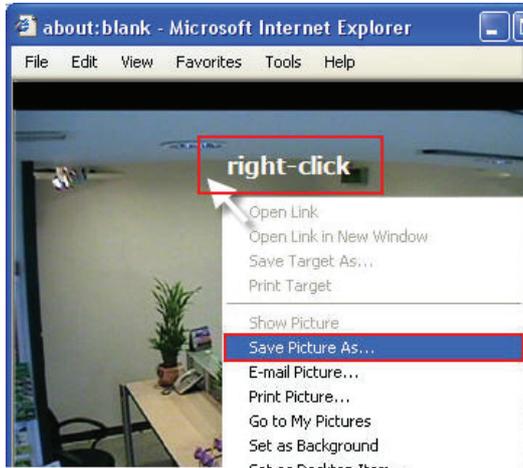

** If you are running Windows Vista or 7, please make sure IE is run with the "Administrator" privilege in order for this function to work properly.*

Right-click anywhere on the image and select "Save Image as" from the pull-down menu

In the pop up dialog, name the image file and choose which directory the image will be saved to and click "Save"

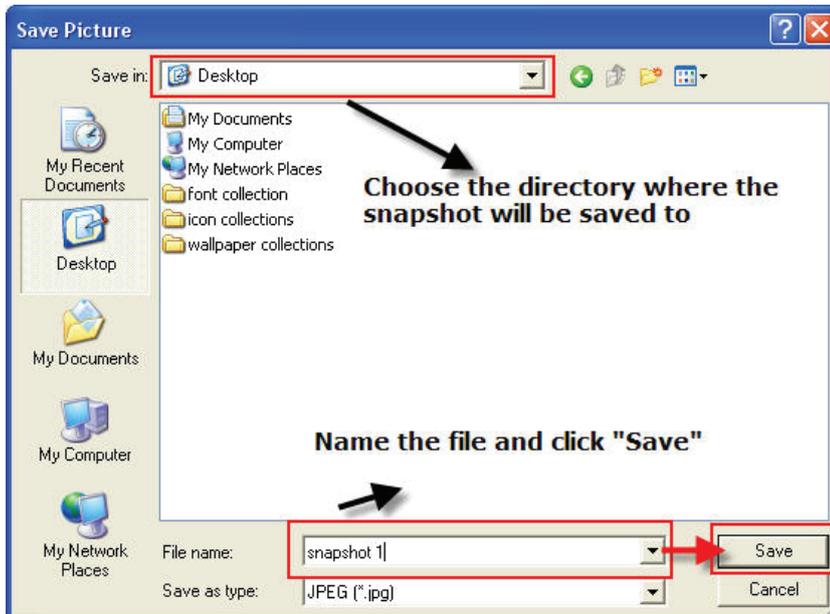

Full Screen View of a Live Video

To view a video in full screen, click the  button. To exit full screen video, double-click anywhere on the video.

Turn On/Off Audio of a Live Video

You can retrieve audio from a particular camera. Simply click the  button to do so.

The button will show in different color once the audio is turned on.  Click on it again to turn off audio.

Start/Stop Recording of a Live Video

You can manually start or stop recording of a live video by using the  button.


The button will show in different color once the recording is started manually.  Click on it again to stop recording.

Audio post

This function allows user to speak from a PC through a microphone and the audio can be played at the camera side if it has a speaker connected to it.

1.7 Change Web UI Display Language

You can change the web UI display language from the current login username link located at the upper-right hand corner. Click on the link opens up a new window which displays detail information about the user as well as a drop-down menu which lets you change the display language.

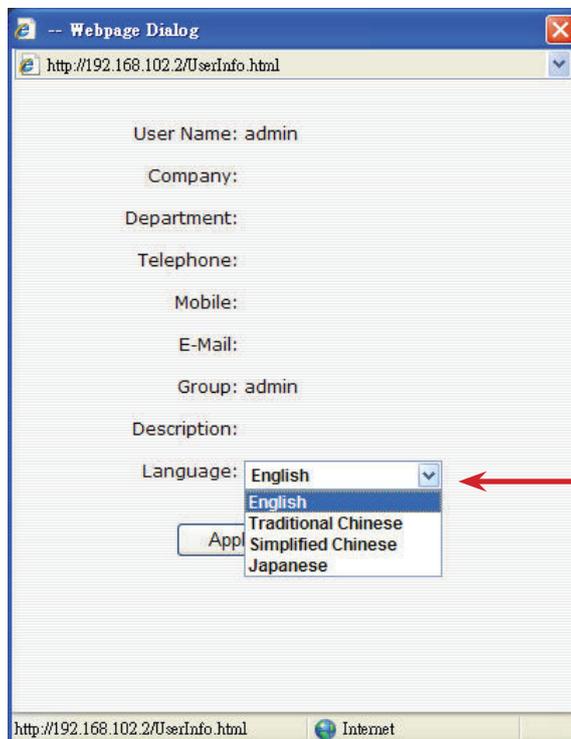

1.8 Live View through iPhone


You can use iPhone and perform single channel live view to the NVR by using its Safari browser. To be able to view the live video through the Safari browser, make sure "javascript" is on under "Settings" >> "Safari" >> "Javascript"



Once Javascript is enabled, click the "Home" button on the iPhone to go back to the home screen and open the Safari browser



Type in the IP address of the NVR in the address bar

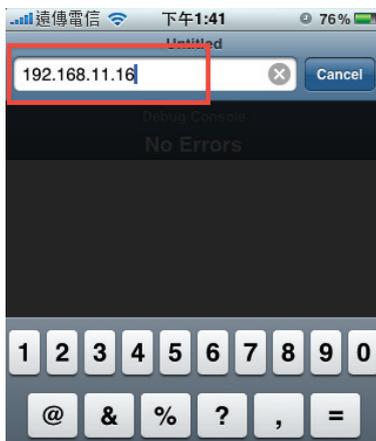


You should be prompted to enter the username and password to access the NVR



Upon successful login, you should see the live view video of the first channel



Click on the "Channe" drop-down menu to select other cameras

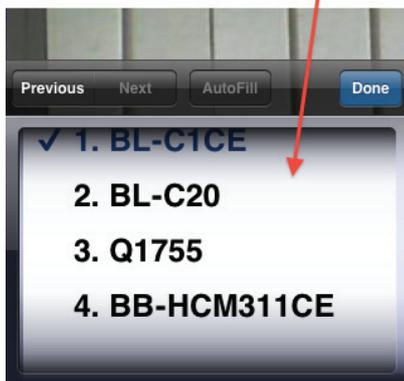


If a PTZ camera is selected, the corresponding control buttons will display (control PT only)



** Please note that this function is camera dependent and is not available to all cameras. Certain cameras do not allow adjusting image size and the selection "Auto" will be used.*

1.9 Live View through Blackberry Phones


You can use Blackberry and perform single channel live view to the NVR by using its Safari browser. To be able to view the live video through its browser, make sure "javascript" is enabled under "Browser" >> "Menu button" >> "Options" >> "Browser Configuration"

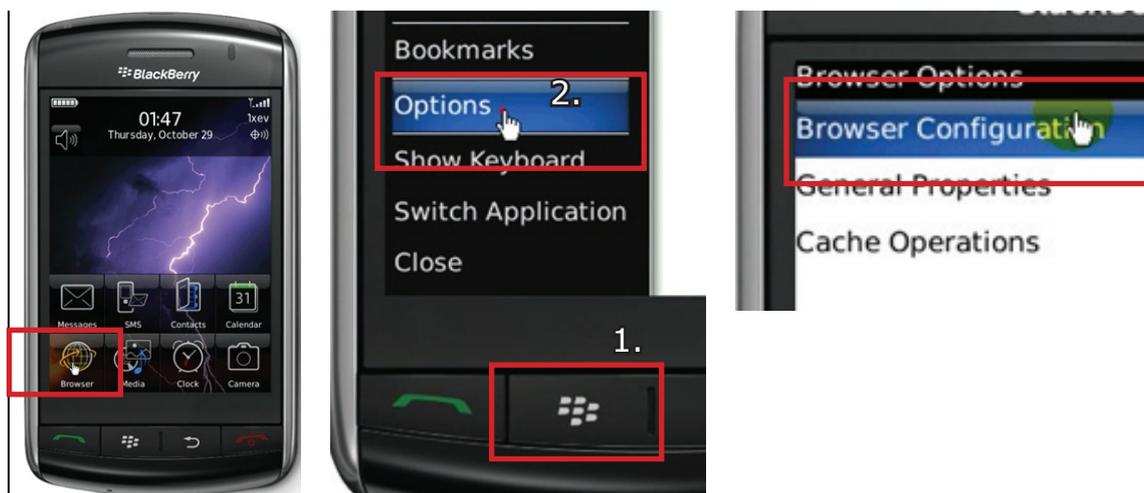


Enable the "Support Javascript" option and click the menu button and click "Save Options"



Go to "General Properties"

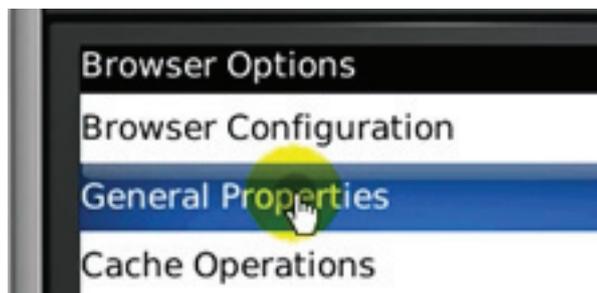

Make sure two options illustrated below are enabled

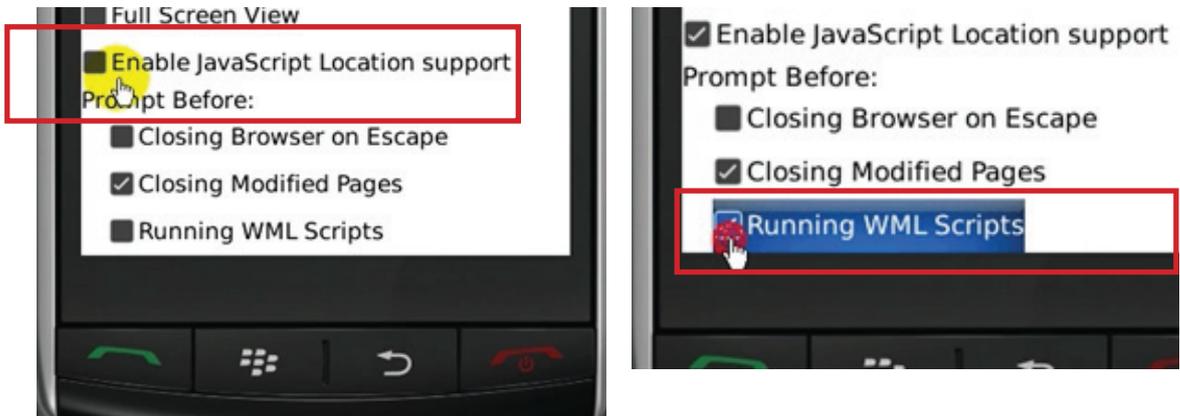

Press the menu button and click the "Save Options" to save settings




Press the button highlighted below to go back to the browser



Type in the IP address of the NVR in the address bar



You should be prompted to enter its username and password for access

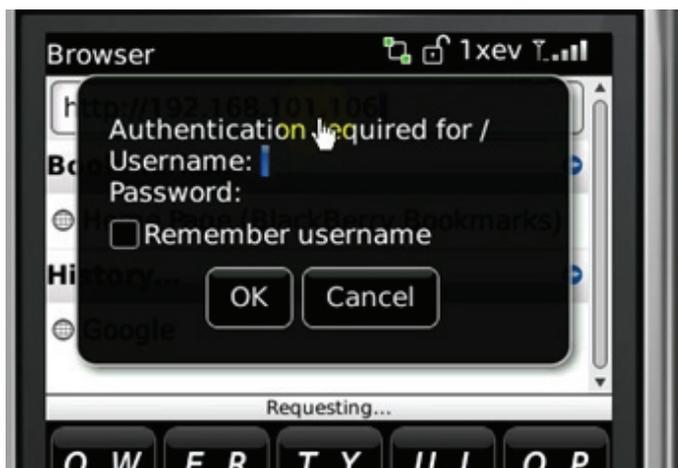

2. Playback



Channels to be played back Methods to search playback Playback video control buttons Playback video

Playback is a function that allows you to play one or more videos that were previously recorded by a chosen recording method or due to an event trigger. The NVR offers synchronized playback from up to 4 channels and various types of search methods are provided to help you find the footage you need quickly.

You can turn on or off the audio of a recorded video at your choice if audio was also recorded during the recording of the video.

Playback video can be viewed in full screen and snapshots can be taken and saved during a video playback.


2.1 Methods to Search Playback Videos

The NVR offers three methods to quickly help users find videos that were previously recorded:

- Search by time: *Specify a time range and search videos recorded within that range*
- Search by event: *Find videos that were recorded due to event triggers*
- Play by start time: *Enter a specific time a video was recorded to start playing back the video*

Search by time chart

- Start by selecting which channel(s) you would like to perform a search on:

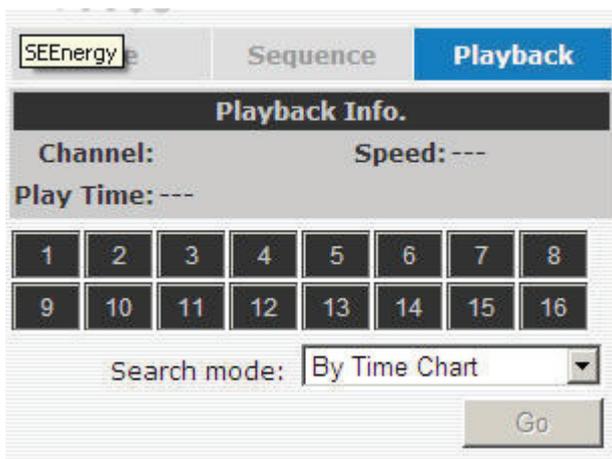

* Selected channels will be marked in red



- Select "Search by time chart" from the "Search Method" drop-down list and click "Go" to start the search:



- Results will then be displayed in a "Date/Channel" table and boxes marked in blue represent videos found in those dates:

Date:


CH1	Ch2	CH3	CH4	
				1
				2
				3
				4
				5
				6
				7
				8
				9
				10
				11
				12
				13
				14
				15
				16
				17
				18
				19
				20
				21
				22
				23
				24
				25
				26
				27
				28
				29
				30
				31

- Click on any blue cell box should direct you to the hour/channel table if there were multiple videos recorded during that date:

CH1	Ch2	CH3	CH4	
				1
				2
				3
				4
				5
				6
				7
				8
				9
				10
				11
				12
				13
				14
				15
				16
				17
				18
				19
				20
				21
				22
				23
				24

** Videos from other cameras that are recorded on the same date will also be displayed*

- Click on the cell box again will start playing back the videos if you have reached the end of search results:

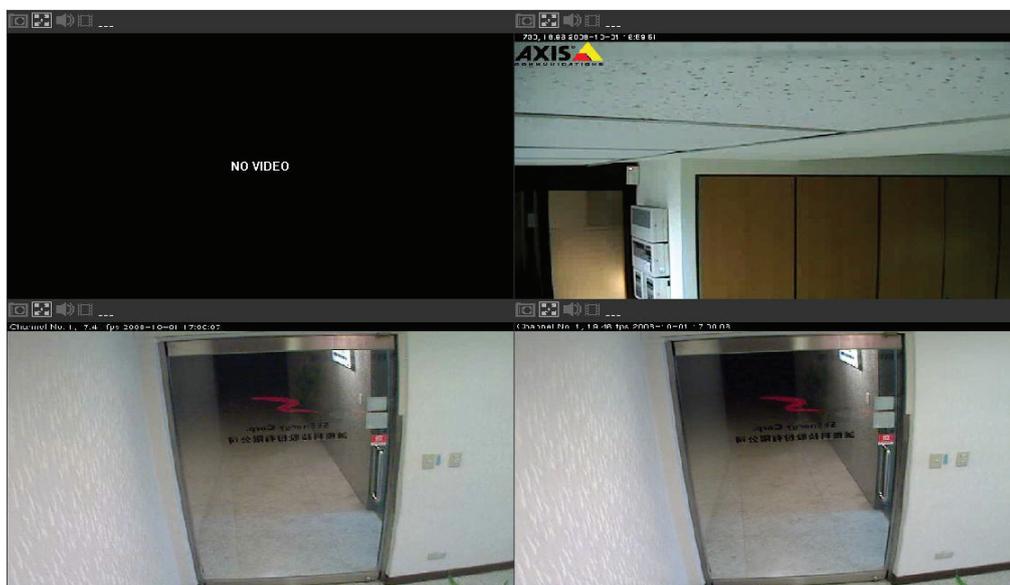

- Videos found from other cameras that were recorded at the same time will also be played.

Search by event

- Start by selecting which channel(s) you would like to perform a search on:



* Selected channels will be marked in red



- Select "Search by event" from the "Search Method" drop-down list and click "Go" to start the search:
- Results will then be listed like what is shown below (displays the oldest record top down). Click on a particular result to start the playback:



* You can click "Next Search" to display the next 15 results.

- You may also specify a new start time to search and display results from then on. You can restrict the number of results to be displayed at once (max. 30) and perform the search again




Play by specific time

If you know when a recording was taken place, you may choose the "Play by start time" from the "Search Method" drop-down list




Then you will be prompted to enter a specific time and date for the recorded video.

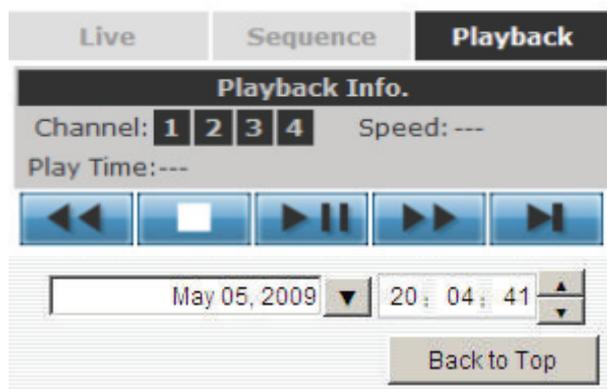

Use the  button to select month, date, and year

Search by event (Most Recent)

This function quickly displays the most recent event recordings from the selected channels, displaying the most recent result top down. You may click "Update" to update the list to display the most recent result

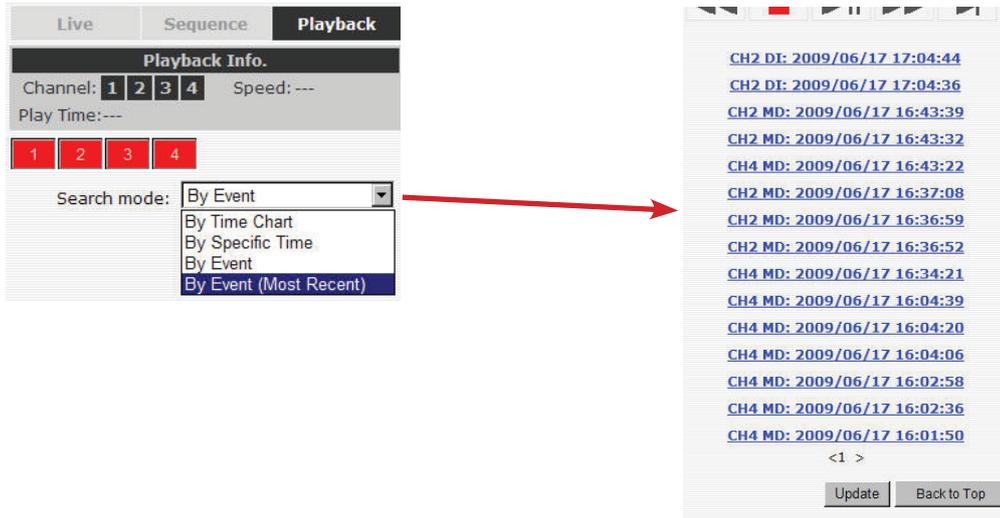

2.2 Export Playback Videos to AVI Files


User can export the recorded playback videos stored on SVR-116 to a local computer and save them in AVI file format. The files can then be played on the PC by a 3rd party media player such as VLC player or Windows Media player.

Once you locate the recorded videos with steps described in the previous section, hit the "Export AVI" button on a video window of the video you wish to export.



** If you are running Windows Vista or 7, please make sure IE is run with the "Administrator" privilege in order for this function to work properly.*


A new dialog will pop up and allows you to specify the time frame (or length) of the video you wish to export

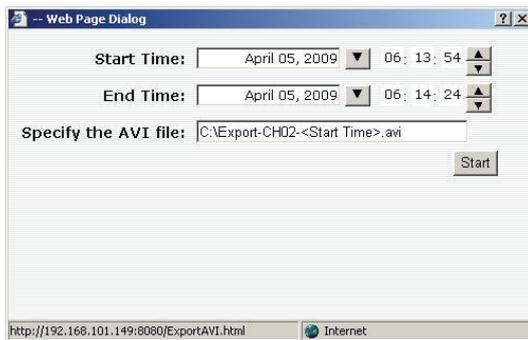


Click the  button to pull down the calendar to help you specify the month, date and the year



Specify the starting and ending hours of the video by entering numbers in the text boxes

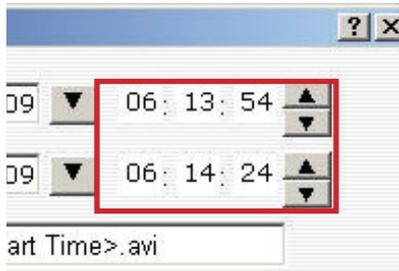


Hit the "Start" button to start exporting. The file will be automatically named and saved under the C:\ partition

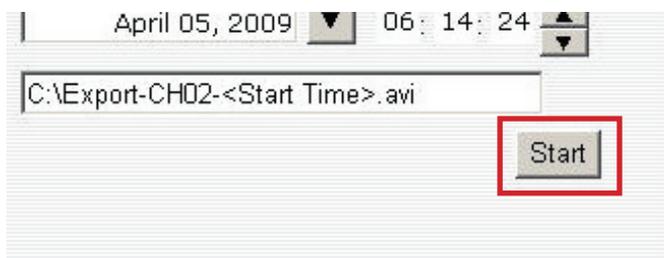

You will be notified once the process is completed successfully



The exported AVI file will be saved under the C partition

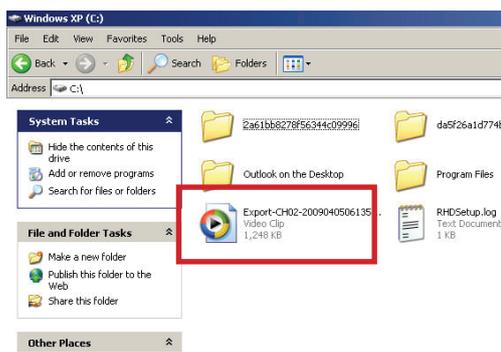


** ffdshow is required in order to play the exported AVI file with Windows Media Player. You can get it at "<http://sourceforge.net/projects/ffdshow-tryout/>" to download the "ffdshow_beta6_rev2527_20081219.exe".*

2.3 Play Exported Playback Videos with NVR Media Player

You can also use the NVR Media Player to play the exported AVI files. This can save you the trouble of installing third-party media player or codecs when playing the exported AVI videos.


The NVR Media Player will be automatically installed after the CMS software is installed. You can launch the player under "Start" >> "All Programs" >> "IVS" >> "IVS Central Basic" >> "NVR Media Player"

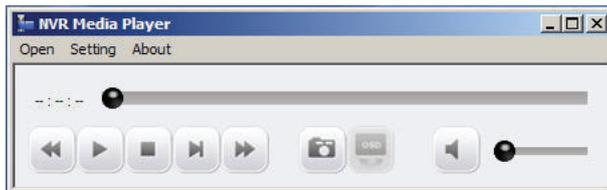

Click "Open" >> "AVI File"



Locate the exported AVI file, and click "open". (normally under "C:\ExportFolder")

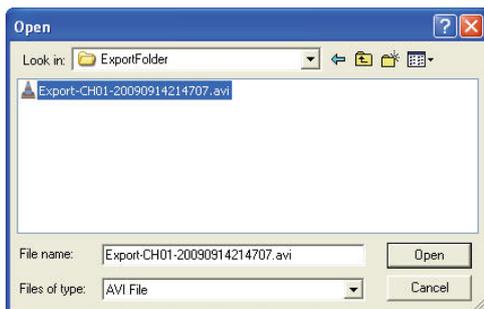

The video will then start playing







- video play control bar
- video play control buttons:
Rewind/Pause (Play)/Stop/Next Frame/Fast Forward/
Screenshot/Display OSD
- video play time
- Volume Control
- Audio Control (click to enable/disable)
- Video Play Speed

2.4 Open Event Snapshot images with NVR Media Player

The NVR sends snapshots that are taken when an event occurs to a destined FTP server or mail recipient. These type of snapshot images are saved in a proprietary image file format, h4i or p4i, and can only be opened by the NVR media player.

To do so, Select "Open" from the top menu then select "Image File". A new dialog should be displayed which lets you locate the image file.

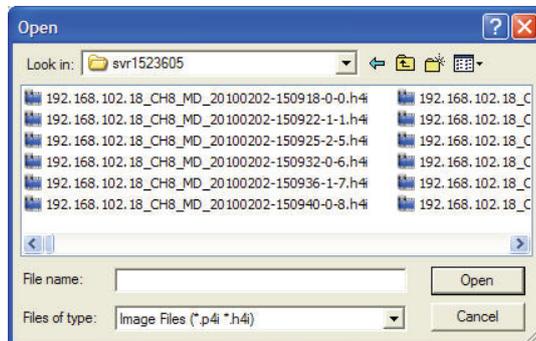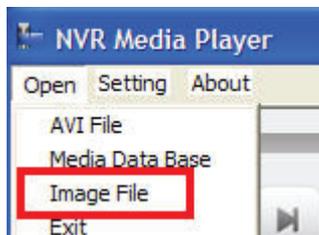

3. System Setup

3.1 System Configurations

The "System Configurations" page provides users options to setup the device quickly and properly. After properly configuring all settings in all the sub-pages, users should expect a fully working network video recorder that is ready to manage cameras on the network. We will start by configuring its network settings to make sure it works correctly in your network. Next, we will help you adjust the system time so videos will be recorder with correct timestamp. To better secure the system for unwanted disturbance, we will guide you on setting up user's account and privileges to prevent settings gets altered by users other than the system administrator. Lastly, we will tell you what you should expect after installing a hard disk and how to prepare the hard disk for the video recording.

3.1.1 Network Settings

The screenshot displays the web interface for the SVR-116 Network Video Recorder. On the left is a sidebar menu under the heading "Setup", containing sub-items: System Configuration (with a sub-link for "Network Setup"), Channel Configuration, Event Configuration, Recording Configuration, and System Options. The main content area is titled "SVR-116 Network Video Recorder tst" and is divided into two sections: "Network Setting" and "Optional Setting".

Network Setting

- Connection Type:
- IP Address: 192.168.102.2
- Subnet Mask: 255.255.252.0
- Gateway: 192.168.101.1
- DNS1: 192.168.11.11
- DNS2: 192.168.11.13
- HTTP Port:
- Streaming Port:
- UPnP Port Forwarding: External Port:

Optional Setting

- Device Name:
-

You need to adjust settings in this page for the device to work properly in your network. It is critical that settings here are configured correctly based on your network configurations so that the recorder can be administered through the local area network and cameras can be connected from it.

By default, the recorder is set to obtain IP address from DHCP server, it should be sufficient in most network environments, and most likely you should not need to alter anything in this page. To locate the recorder, simply use the SEEnergy IP Utility with steps described in page 12.

If you wish to set the recorder to use a static IP address in your local area network,

1. Choose "Static IP" from the "Connection Type" drop-down menu
2. Enter the IP address, subnet mask, default gateway address and DNS server address for the recorder
3. Enable "DHCP Server" under "DHCP Server" if you wish to use the recorder as a DHCP server, or leave it disabled if there is already a DHCP server in the network 
4. Click Apply for the settings to take effect

Network Setting

Connection Type: **Static IP**

IP Address: 192 . 168 . 101 . 143
 Subnet Mask: 255 . 255 . 252 . 0
 Gateway: 192 . 168 . 101 . 1
 DNS1: 192 . 168 . 11 . 11
 DNS2: 192 . 168 . 11 . 13

HTTP Port: 80
 Streaming Port: 9877

UPnP Port Forwarding: External Port: 6000

Optional Setting

Device Name: test

DHCP Server

DHCP Server: ON OFF

Current DHCP Clients

IP Address	Name (if any)	MAC Address	Time when IP obtained

 The recorder can detect the presence of a DHCP server upon startup. It sets itself to use static IP address if there is no DHCP server currently presented in the network. Its DHCP server function is also turned on at the same time to assign IP addresses to cameras that are later connected to the network
 o You can manually turn off the DHCP server function if you wish to use a separate DHCP server

 Change the recorder's IP address would require the recorder to restart. Restart the device under "system Options" >> "Maintenance" for the settings to take effect.

3.1.2 DDNS Service

DDNS, which stands for "Dynamic DNS", is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system (in this case, the NVR) using the Internet Protocol Suite, to notify a domain name server to change, in real time, the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.

A popular application of dynamic DNS is to provide a residential user's Internet gateway that has a variable, often changing, IP address with a well known hostname resolvable through standard DNS queries.

This is useful if the NVR is placed on the Internet with a dynamic public IP, which once the DDNS is properly setup, users can access the NVR remotely with the DDNS domain name without worrying if the IP has changed or not.

NVR Setup

- [-] System Configuration
 - Network Setup
 - DDNS Service
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
- [+] Channel Configuration
- [+] Event Configuration
- [+] Recording Configuration
- [+] System Options

Dynamic DNS Service

Enable DDNS Service

Server Address:

Domain Name:

User ID:

Password:

Connection Status: Disconnected


 Please make sure a valid DNS server has been configured under the "Network Setting" page in order for this function to work properly.

 The NVR currently only works with free DDNS service provided by "DynDNS". For more information, please go to www.dyndns.com

 If the NVR is placed behind a router or Internet gateway, please make sure port forwarding for port 80 is configured on the router or the gateway in order for the DDNS function to properly register with the service. **It's often suggested to use the DDNS function in the router/gateway for such case instead.**

 Once you have the DDNS function successfully up and running, please **DO NOT** forget to configure port forwarding for the NVR web port (default 80) and the streaming port (default 9877) in the router/gateway for remote viewing. You can then type in `http://yourddnsdomain` in the browser to access the NVR remotely for live view.

In order to properly configure the DDNS service function, please register a free DDNS domain name and account from DynDNS first. Go to www.dyndns.com from the browser to do so.

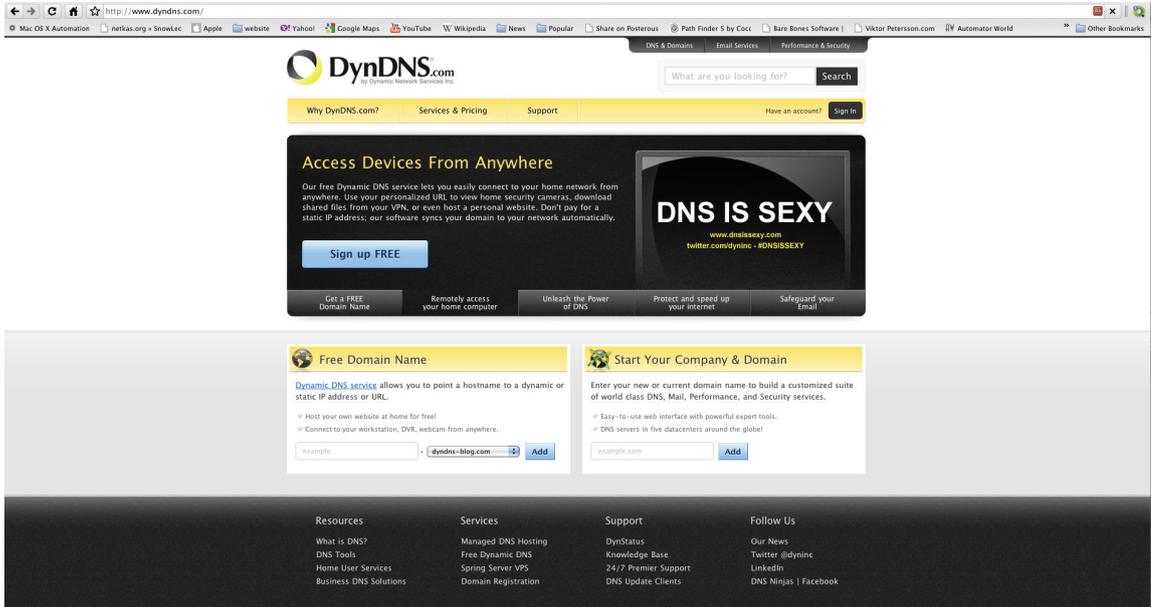

Click on the "Signup FREE" button to begin



Choose the FREE service on the left

Sign up now and get remote access to home computers and devices



"Remote Desktop | DynDNS | Private static IP - Wifi" @ip9723

Fill in the necessary fields as illustrated below:

Add New Hostname ↑ Host Services

Note: You currently don't have any active [Dynamic DNS Pro](#) in your account. You cannot use some of our Host Service features. Paying for an Dynamic DNS Pro will make this form fully functional and will add several other features.

Hostname: . dyndns.org

Wildcard Status: Disabled [\[Want Wildcard support?\]](#)

Service Type: Host with IP address [\[?\]](#)
 WebHop Redirect [\[?\]](#)
 Offline Hostname [\[?\]](#)

IP Address:
[Your current location's IP address is 60.250.139.170](#)
TTL value is 60 seconds. [Edit TTL.](#)

Mail Routing: Yes, let me configure Email routing. [\[?\]](#)

What do you want to use this host for?
Select services and devices you would like to use with this hostname.

Work From Home Office or VPN:

Hosting and Design For Web Sites and Blogs:

Remote Access For Devices:

Enter a desired hostname here

Select a desired sub-domain from the drop-down menu

Click here to automatically fill in the current public IP in the "IP Address field"

Pick one or more options here (any is fine)

Click to go to the next step

The page will check whether the hostname you entered has been used by another user or not as soon as you click the "Add to Cart" button. If you see below message, simply enter a different and click "Add to Cart" again

Hostname: . dyndns.org

This hostname already exists. It may be in use by another customer.

Once you get to the next page, fill in the necessary fields as illustrated below

Shopping Cart

Host [seenergy88.dyndns.org](#) added to cart. **Finish FREE checkout to activate.**

Your cart contains **free services only**. You will not be asked for credit card information.

Upgrade Options

Free accounts allow only five Dynamic DNS hosts.

- To add more and enjoy [additional benefits](#) for only \$15.00 per year, [purchase Dynamic DNS Pro](#).
- To get Dynamic DNS for **your own domain**, use [Custom DNS](#).

Dynamic DNS Hosts

seenergy88.dyndns.org	-	<input type="button" value="remove"/>	\$0.00
---------------------------------------	---	---------------------------------------	--------

Have a coupon? [Log in.](#)

Sub-Total: \$0.00
Order Total: \$0.00

Create account or log in to continue

Create an username and a password here. This will be used in the NVR's configuration. Enter a valid email address as well.

Username:

Password:

Confirm password:

Email:

Confirm email:

Subscribe to: DynDNS.com newsletter (1 or 2 per month)
 Dyn Inc. press releases
 Remove HTML formatting from email

Security Image:



Enter the numbers from the above image:

I agree with the [acceptable use policy \(AUP\)](#) and [privacy policy](#).

Already Registered?

Username

Password

[Forgot your password?](#)



Enter the security code

Check to agree the license

Click to finish creating the account

Go back to the NVR's DDNS service configuration page under "Setup" >> "System Configuration" >> "DDNS Service".

Fill in the domain name you picked during the registration in the "Domain Name" field and the username/password you created in the "User ID" and "Password" field and click "Apply" to finish

NVR16CH Network Video Recorder

Dynamic DNS Service

Enable DDNS Service

Server Address:

Domain Name:

User ID:

Password:

You can click the "Check DDNS Status" button to check the DynDNS service status. If you are getting a "Disconnected" message, it means that DDNS service server is down or the NVR is not connected to the Internet. If everything is ok normally, you should be prompted with a success message

NVR16CH Network Video Recorder

Dynamic DNS Service

Enable DDNS Service

Server Address:

Domain Name:

User ID:

Password:

Connection Status: Disconnected


Message from webpage

 Connect DDNS successful

Notice the "Connection Status" displays the status of whether the NVR has been able to successfully update its current public IP address to the DynDNS server



The NVR will automatically check with the DynDNS server once every hour and update its latest public IP to the server. The "Apply" button does the same thing which if you are see the "Disconnected" status, you can use it to manually check with the server without waiting for the NVR to update itself in the next hour. **However, it is advised not to do so too often as DynDNS disallow repetitive updates within a short period of time and the account will be banned if such action is detected.**

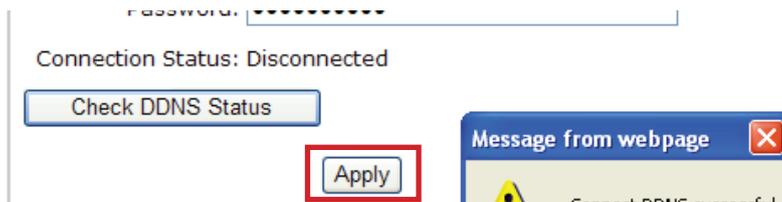

3.1.3 Time and Date

Setup

- System Configuration
 - Network Setup
 - Time and Date**
 - Users Account
 - Group Privilege
 - Disk Setup
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

Time and Date Setting

Time Zone: GMT+08 (Beijing, Hong Kong, Shanghai, Taipei) Summer time

Manual

Year: 2009 Month: 05 date: 06
Hour: 10 Minute: 24 Second: 29

Sync with NTP Server

NTP Server: ntp.ucsd.edu
Update Interval: 24 hr

Sync with PC May 06, 2009 10:24:29

Apply

Set the time and date by selecting the time zone according to your location. It is imperative that you set the recorder's time correctly to avoid the following errors:


- Incorrect display time for playback videos
- Inconsistent display time of event logs and when they actually occur

After selecting the time zone, choose an option below to set the recorder time

- **Manual** – Use the drop-down list and configure the time manually
- **Sync with NTP server** – enter the hostname or IP address of a valid NTP server and set how often the recorder should synchronize the time with it by using the "Update interval" drop-down menu
- **Sync with PC** – Check this option to synchronize the recorder time with the PC that you are currently using to access the recorder


3.1.4 User Account

The recorder can be accessed by multiple users simultaneously. You can add, remove, and edit users by using options provided in this page to keep user information organized. Each recorder comes with a built-in "admin" account with password "admin". It's highly recommended to change the password upon your initial login.

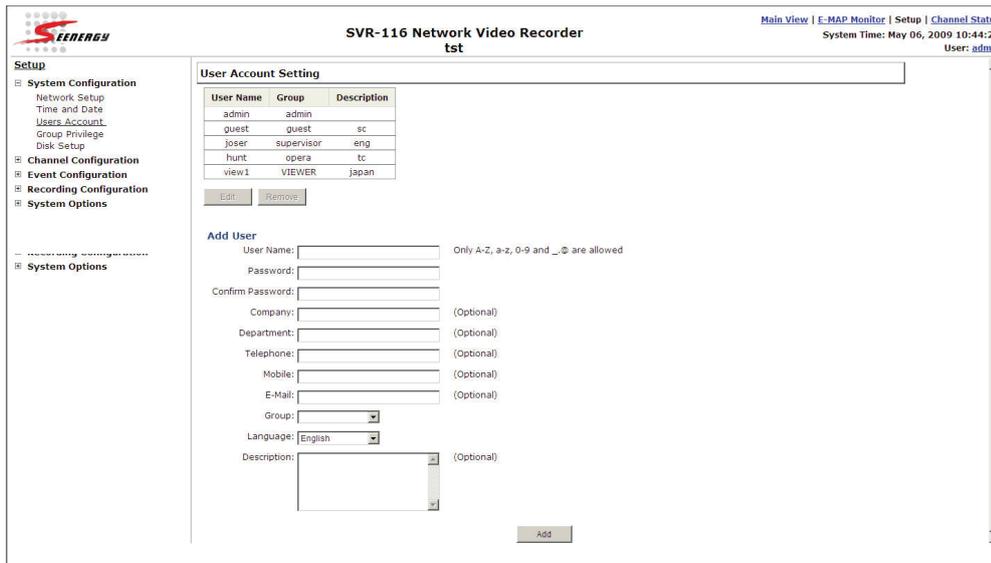

To change the password of the "admin" account:

1. Click and highlight the "admin" account in the account list and click "Edit"
2. Its information should be displayed in "User Account Information"
3. Enter a new password in the "Password" field and enter it again in "Confirm Password"

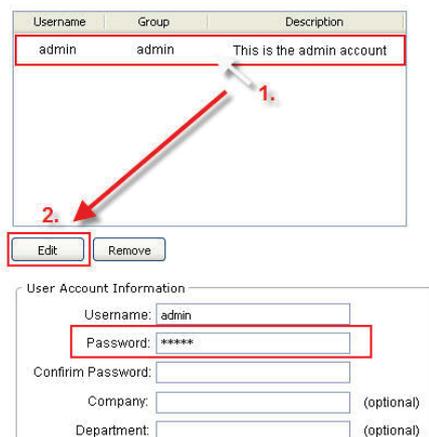

To add a new user:

- Enter a username and password in "User Account Information". All other fields are optional for your own reference.
- Select a group from the "Group" drop-down menu to assign the new user to a particular group
- Enter a short description for the account if you wish
- Click "Apply" to finish configuration

3.1.5 Group Privilege

Group Privilege is where you can create multiple customized access policies for situations if you need the recorder to be accessed by users other than the administrator. You can do so by creating a group, and then remove access privileges for certain configuration pages or cameras. Users that are created and assigned to this group will have limited access instead of full administration rights.

NVR Setup

- System Configuration
 - Network Setup
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

Group Privilege Setting

Group:

Account Type:

Live:

<input checked="" type="checkbox"/> CH1 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH2 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH3 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH4 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH5 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH6 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH7 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH8 <input type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH10 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH11 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH12 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH13 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH14 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH15 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH16 <input type="checkbox"/> Audio

Playback:

<input checked="" type="checkbox"/> CH1 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH2 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH3 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH4 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH5 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH6 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH7 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH8 <input type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH10 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH11 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH12 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH13 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH14 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH15 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH16 <input type="checkbox"/> Audio

Allow use of PTZ:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16

System Configuration:

<input checked="" type="checkbox"/> System Configuration	<input checked="" type="checkbox"/> Channel Configuration	<input checked="" type="checkbox"/> Event Configuration
<input checked="" type="checkbox"/> Recording Configuration	<input type="checkbox"/> System Options	

The recorder comes with seven built-in groups and five built-in privilege profiles, except the "admin" and the "guest" accounts; the other five groups are fully customizable or you can simply assign a group with one of the default privilege profiles. You can, however, assign more than one users to the "admin" account if you wish to do so. The guest account comes with a "view-only" privilege in the "Live View" page, and users in this group do not have the power to make any changes in the "Live View" page or have access to pages other than the "Live View" page.

To create a group, select a group from the "Group" drop-down

Group:

Privilege Type:

You can change the group name by clicking the "Change Group Name" button. A text box will be displayed for you to enter the new group

Group:

Privilege Type:

Choose what type of privilege you would like this group to have from the "Privilege Type" drop-down menu

Group:
Privilege Type:

Its access privilege will then be displayed. You can alter its settings by allowing or denying access to other cameras using the checkboxes instead of accepting the defaults

Group Privilege Setting

Group:
Account Type:

Live:

<input checked="" type="checkbox"/> CH1 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH2 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH3 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH4 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH5 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH6 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH7 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH8 <input checked="" type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH10 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH11 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH12 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH13 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH14 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH15 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH16 <input checked="" type="checkbox"/> Audio

Playback:

<input checked="" type="checkbox"/> CH1 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH2 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH3 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH4 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH5 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH6 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH7 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH8 <input checked="" type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH10 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH11 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH12 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH13 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH14 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH15 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH16 <input checked="" type="checkbox"/> Audio

Allow use of PTZ:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16

System Configuration:

<input checked="" type="checkbox"/> System Configuration	<input checked="" type="checkbox"/> Channel Configuration	<input checked="" type="checkbox"/> Event Configuration
<input checked="" type="checkbox"/> Recording Configuration	<input type="checkbox"/> System Options	

3.1.6 Disk Setup

Once you install a hard disk to the recorder, you would need to initialize it so that it can be ready for recording. You can obtain basic information about the disk you installed in this page

To initialize it, simply click the "Format" button

NVR Setup

- [-] **System Configuration**
 - Network Setup
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
- [+] **Channel Configuration**
- [+] **Event Configuration**
- [+] **Recording Configuration**
- [+] **System Options**

Hard Disk Setting

Disk ID	Disk Type	Capacity	Disk Status	Format
1	Internal	142GB	Online	<input type="button" value="Format"/>

You can also connect external USB thumb drive to the recorder for firmware upgrade.

 For instructions to install a hard disk to the recorder, refer to page 9

 To obtain detail information about the disk, go to "System Options" >> "Disk Status"

3.2 Channel Configurations

3.2.1 Add a Camera

The NVR provides two options for adding a new camera. Users have the option to let the recorder automatically find the cameras or it is possible to enter camera's information and add it manually.

The screenshot shows the 'Channel Setting' page of the SVR-108 Network Video Recorder. The page title is 'SVR-108 Network Video Recorder' and the user is 'admin'. The system time is 'June 01, 2009 12:40:16'. The left navigation menu includes 'Setup', 'System Configuration', 'Channel Configuration', 'Event Configuration', 'Recording Configuration', and 'System Options'. The 'Channel Configuration' section is expanded, showing 'Channel Setting', 'OSD Setting', 'PTZ Setting', and 'E-MAP Monitor'. The 'Channel Setting' section contains a table with the following data:

Channel	Channel Name	Group	IP Address	Format	Resolution
1	cam1	Group1	192.168.101.21	MJPEG	4CIF

Below the table are 'Remove' and 'Edit' buttons. A 'Search' button is also present. The 'Add New Channel' section includes the following fields:

- Channel ID: 2 (dropdown)
- Channel Name: cam2 (text input)
- Group: Group1 (dropdown) with a 'Change Group Name' button
- IP Address: (text input)
- User Name: (text input)
- Password: (text input)
- HTTP Port: 80 (text input)

At the bottom, there is a 'Detect' button with the instruction: 'Once you fill out above information, click "Detect" to retrieve camera setting'. There are also 'Add' and 'Cancel' buttons.

Automatic Search:

1. Click the "Search" button to perform the camera search. You should be prompted to install Active Control component in order for the search to function properly. Go ahead and click "Install"




2. After that, the search should begin and its status should be displayed:




3. Found cameras should be listed and simply select a camera from the list and press "Configure"



4. Its corresponding information should be displayed in the "Camera Information" section. Enter its username and password and select the channel ID and name the camera.

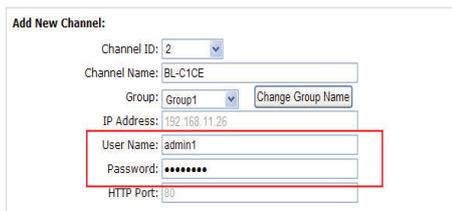

5. Click on "Detect" to establish connection between the recorder and the camera. If connection establishes successfully, camera's detailed information should be polled and displayed as below

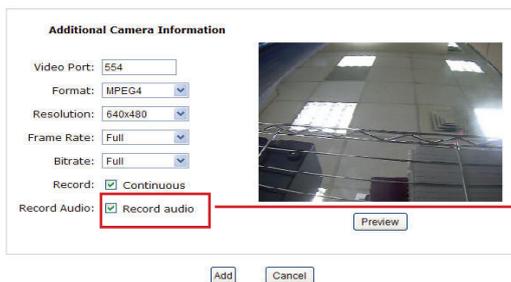

* Audio from this channel will not be recorded if this option is unchecked

6. Adjust its video format, frame rate, resolution or bitrate...etc if you wish. You can also click on the "Preview" to preview the live video of the camera.

Click "Add" to finish adding the camera

 If cameras are marked with "*" in the search result, it means those cameras are already configured and connected to SVR-116.

1. Add a new camera by manually entering camera's setting in the "Camera Information" page.

	IP Address	HTTP Port	Installed
	192.168.101.40	80	
	192.168.101.42	80	
	192.168.101.41	80	
	192.168.101.47	80	
	192.168.101.43	80	
	192.168.101.23	80	*
	192.168.101.46	80	

Add a camera manually

Simply follow the instruction described above but instead of using the "Search" function, enter the camera's IP address and credential in the "Camera Information" manually, then follow step 5 ~6 described above.

Add New Channel:

2. Channel ID:

Channel Name:

Group:

IP Address: **1.**

User Name:

Password:

HTTP Port:

Once you fill out above information, click "Detect" to retrieve camera setting

Enter manually

3.2.2 OSD Settings

The OSD (On Screen Display) allows users to add informational text message and embed it onto the video. By default, this function is turned off. To add texts to one or more videos,

1. Select a camera you would like to add text to and choose "Display OSD"

2. Choose one or more display options if you would also like the recorder to automatically embed the system time or the frame rate for you. Or simply choose to display a custom message of your own

3. Next, define where the text will be displayed by either entering an X/Y coordinate or use the system pre-defined position from the drop-down menu

4. Click on the "Preview" button to see the preview of your setting and click "Apply" to save the configuration




Preview * Click this button to see a preview of your OSD settings

- The texts can be further adjusted with changes to different size, color or font so they can be more visible on the video

3.2.3 PTZ Preset Settings


The recorder supports PTZ cameras and can set multiple preset points or retrieve and manage preset points that are set in the camera. This is helpful if you need to monitor multiple spots in one area from a particular camera.

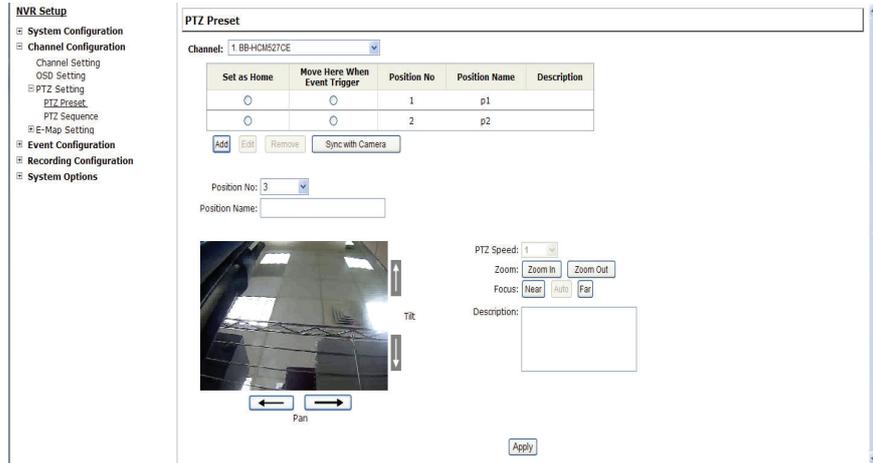

1. To set up PTZ preset points, select a camera from the "Camera" drop-down menu and click "Add"




2. Select a position number for the preset point from the "Position Number" drop-down menu and fill in a name in the "Position Name" field for easier identification

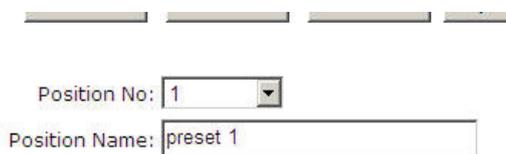

3. Use the PTZ control provided in the configuration page to set the preset point




Ultimately, you can choose to make this preset point a "Home" point among all other preset points, as well as making the camera to move to this particular point when an event is triggered.

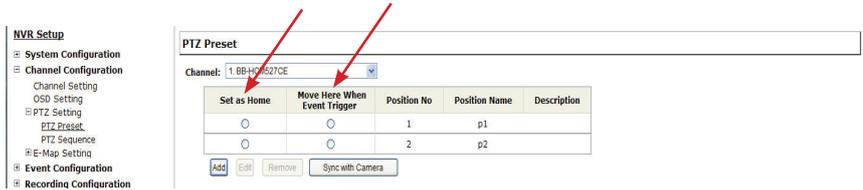

- "Move Here when Event Trigger": In order for this function to work properly, please also complete configuration in "Event Configuration" >> "Event Trigger"

3.2.4 PTZ Preset Sequence

Once you have multiple preset points defined for a camera, it is convenient for monitoring to set up the sequencing viewing among those preset point and let the recorder automatically switch between them for you.

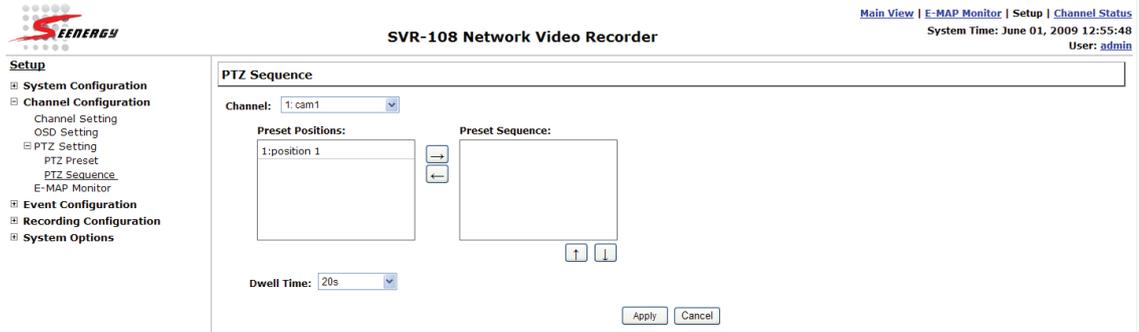

To configure preset sequence for a camera, select a channel from the “Channel” drop-down menu

The available preset points should be listed in “Camera Presets” section

Pick the ones you like for sequence viewing and press the “->” button to move them to the “Preset Sequence” section, then use the up and down buttons to adjust their sequencing positions.


Finally, select a dwell time from the drop-down menu and click “Apply” to save the configuration

- To start preset sequence viewing, check page 21 for instructions


3.2.5 E-Map Setting

3.2.5.1 Local Map Setting

E-Map monitor is a function that alerts users whenever there is an event triggered (e.g. motion detected) from a camera with a geographical perspective. With this function, users can quickly identify which camera has detected an unusual event and where this event is happening. This function works by incorporating the event detection function as well as the recording function, which, as a result, helps users take all the necessary actions when an unusual event occurs.

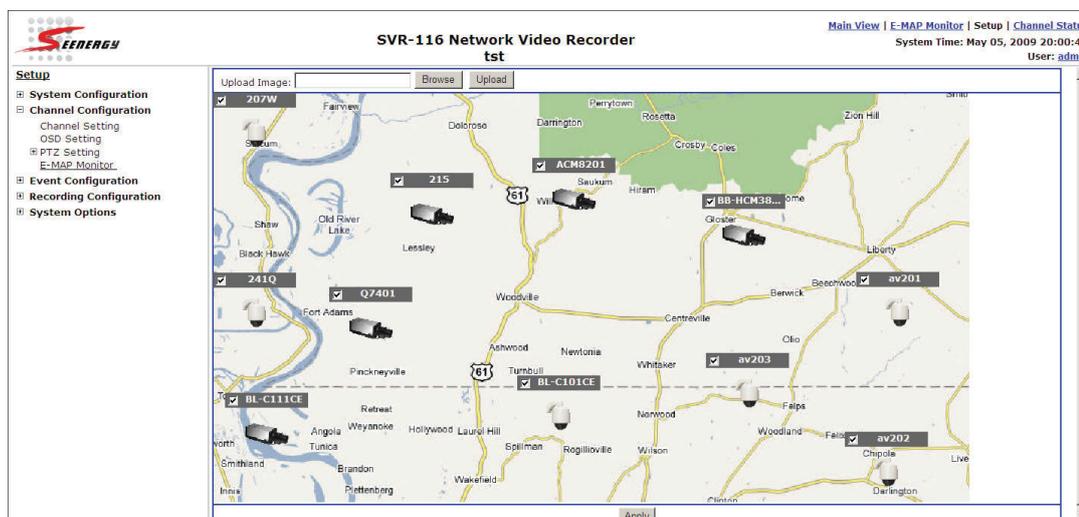


To replace the map, click "Browse" button to locate the new map image file from the local PC and then click "Upload"

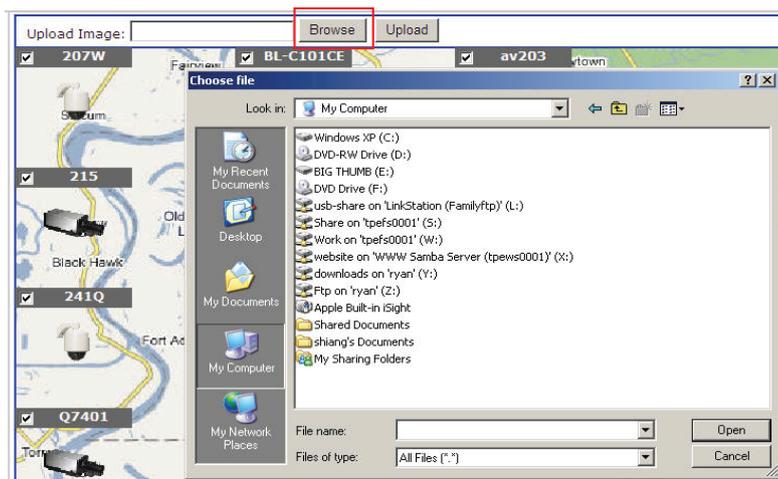

- Only JPG, PNG, and GIF file formats are supported with file size under 100KB

Then click and drag the camera icon to move the camera to define its location.

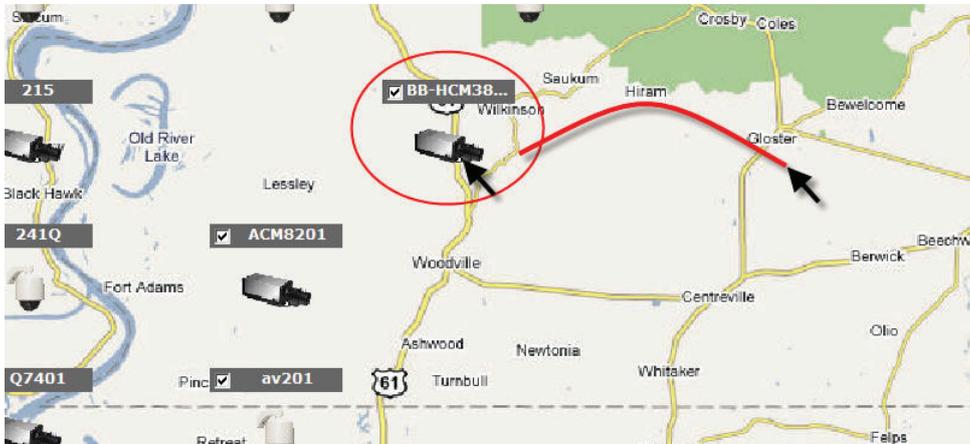

Access the E-Map Monitor page from the upper-right hand corner menu

[Main View](#) | **[E-MAP Monitor](#)** | [Setup](#) | [Channel Status](#)

System Time: May 06, 2009 11:27:58

User: [admin](#)



When the NVR receives an event triggered from any of the cameras, their videos will be displayed on the E-Map and you can double-click on the video to enlarge it




3.2.5.2 Google Map Setting

The Google Map monitor is a similar function to the aforementioned E-Map monitor. It is useful if you are managing multiple cameras from different locations.




To configure locations of each camera, first determine the location you'd like to place the camera to on the map. You can do so by:

1. Zoom in to a smaller area by using the zoom control bar on the map
2. Zoom in to a smaller area by using the mouse scroll button

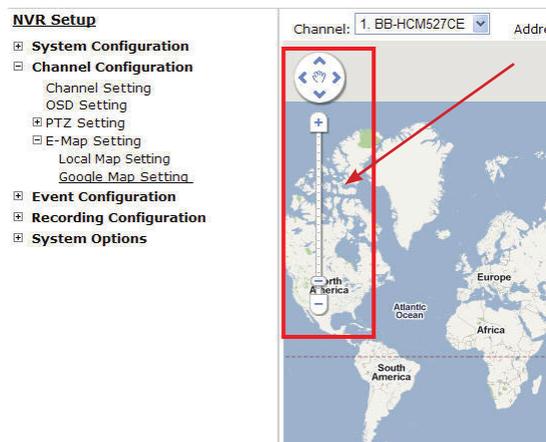

You can also go to a specific place on the map by entering its address or the name of the place in the "Address or places of interest" field:

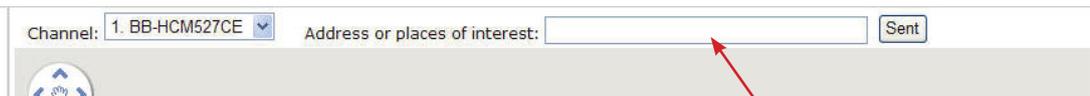

Once the location has been determined, click and drag the camera icon to move it to the desired location:



* Click and drag the icon to re-arrange its location

- The Google Map Monitor requires active Internet connection and can not be used in conjunction with the regular E-Map monitor function.
- You can click anywhere on the map and hold down the mouse left button then drag to move the map itself

You can then access the Google Map Monitor from the top menu:



3.3 Event Configurations

The “Event Configurations” section allows users to define conditions that constitute an event, its corresponding trigger action and when it will be triggered. Such setting can reduce the management overhead and notify the administrator only when it’s necessary.

3.3.1 General Settings

The general settings section can help you quickly configure when an event is triggered, how often events are triggered and the corresponding actions when events are triggered.

Start the event configuration by defining the general settings:

Define when an event will be triggered

- Choose “Always” or “Only during...” under “Event Trigger Duration”
- For the “Only during...” option, choose the days by using the checkbox and then define the time range in those days in the “Start Time” and “End Time” fields that you would like the event trigger function to be enabled.

How often an event is triggered

- Set a time interval under “Event Trigger Interval” to define how often events are triggered


Trigger action

Now that you have the event trigger duration and interval defined, choose what action to be taken during an event trigger:

- You can choose to have the recorder send out the first few frames of the video recorder upon an event is triggered
- You can also choose to have the recorder send out a warning message in e-mail or in txt file format and upload it to an destined FTP server

3.3.2 I/O Settings

This function allows users to manage camera's digital input and output ports right from the recorder. You can setup the recorder to receive triggers from a particular camera's input port and trigger a device, such as an alarm that is connected to the recorder or camera's output port. Cameras that do not have built-in digital input/output port can also be configured to pair with the recorder's DI/DO ports.

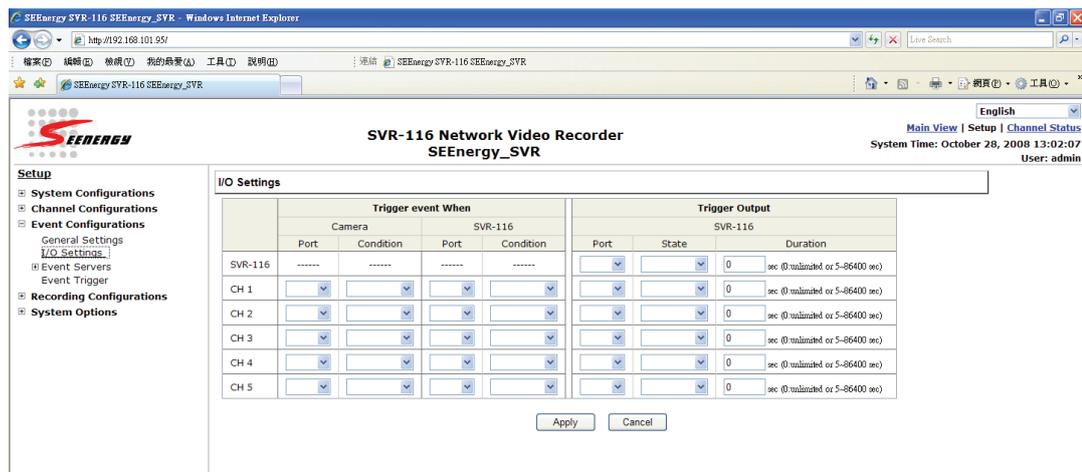

1. For cameras that come with physical digital input ports, their ports will be listed in the far left drop-down menu.
2. Pick the desired channel for I/O mapping, and then select the camera's input port from the drop-down menu.
3. Select the trigger condition from the "Condition" drop-down menu.
4. Select the recorder's input port if you would also like to use the recorder's input port for event trigger. And then select the trigger condition as well.
5. Next, select the recorder's output port and define its trigger state
6. Finally, define the trigger duration.

 *The recorder does not control camera's input or output ports in a way to let you pair recorder itself with a camera's input or output port for event receiving or triggering.*

 *The recorder only acts as a medium for pairing up input/output ports between cameras and the recorder.*

 *Only connected cameras will be displayed in the list.*

 *Some cameras only allow one trigger source be configured at a time, e.g.: if the camera has the motion detection function turned on, its digital input will be disabled and vice versa. Under such circumstance, if you set to use camera's digital input port as the event trigger source, you will not be able to select motion detection as the trigger source for this camera under "Event Configurations" >> "Event Trigger" setup page.*

** The image(s) that are uploaded to the destined FTP server or emailed to a destined mail recipient are in their own proprietary image file format (.h4i or .p4i), which can only be opened by the NVR media player. For details, please refer to page 40.*

3.3.3 Event Servers

Event servers are to be used with event trigger actions. In case of unusual motion detected by the camera or a disk failure, the recorder can send notification with the acceptable format (image/txt) to a destined event server according to the configuration.

Configuring an FTP server

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
 - General Setting
 - DI/DO Setting
 - Event Servers
 - FTP Servers
 - HTTP Servers
 - SMTP Servers
 - Event Trigger
- Recording Configuration
- System Options

FTP Servers Setting

Name	Network Address	Port	Passive Mode	Enabled
<input type="button" value="Edit"/> <input type="button" value="Remove"/>				

FTP Server

Name:

Network Address: *Enter host name or IP address

Port:

Login Information

User Name:

Password:

Passive Mode

Use Passive Mode

Test

*Click "Test" to test the connection to the FTP server:

To add an FTP server,

1. Start by giving a name to the server that you are adding to the recorder
2. Enter the hostname or the IP address of the FTP server
3. Enter the communication port of the FTP server (usually port 21)

FTP Server

Name:

Network Address: * Enter host name or IP address

Port:

4. Enter the username and password of the FTP server if it's required
5. Check "Use Passive Mode" if it's required or leave it unchecked to use active mode

Login Information

Username:

Password:

Passive Mode

Use Passive Mode

6. Click "Test" to verify if all information is entered correctly and the connection to the FTP server can be established successfully
7. Click "Add" for the settings to take effect

Test

*Click "Test" to test the connection to the FTP server:

 *If you wish to edit/remove/enable/disable an FTP server, click to highlight one from the profile list and choose the corresponding action button/checkbox*

Name	Network Address	Port	Passive Mode	Enabled
test	ftp.test.com	21	No	<input checked="" type="checkbox"/>

Configuring an SMTP server

SEENERGY
Connecting Digital Vision

ON OFF Buzzer Stop Language

Live View | Setup | Camera Status
System Time: 03/02/2008 14:20:00

SVR-116 Network Video Recorder

SMTP Servers Settings

SMTP Server 1

Network Address:

Port:

Sender's Name:

Sender's E-Mail:

Enable Authentication

Username:

Password:

Test

Send test email to:

SMTP Server 2

Network Address:

Port:

Sender's Name:

Sender's E-Mail:

Enable Authentication

Username:

Password:

1. Enter the hostname or the IP address of the SMTP server
2. Enter the port of the SMTP server
3. Specify the sender's name in the "Sender's name" field
4. Enter the sender's e-mail address
5. Check "Enable Authentication" and enter the username and password of the SMTP server and as it requires authentication
6. Click "Apply" to save the configuration

3.3.4 Event Triggers

We have finished defining how an event will be triggered and which servers will be receiving notifications in the previous two sections, now we can finish up the event configuration by setting:

- which channels will have event trigger function enabled
- What is considered to be an event
- Where the warnings will be sent to and how they will be sent

Event Handling Setting																
When Channel is triggered by																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	<input type="checkbox"/>					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								
Motion Detection	<input type="checkbox"/>					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								
Custom Event	<input type="checkbox"/>					<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>								

*Please make sure you have properly enabled and configured motion detection region in the camera's web configuration UI before enabling motion detection in the NVR. The NVR only supports single region detection, and only the first region will be used even if you set multiple motion detection regions in the camera.

When NVR is triggered by	
<input type="checkbox"/> Recycled	<input type="checkbox"/> When NVR Start Up
<input type="checkbox"/> Disk Full	<input type="checkbox"/> When NVR System Configuration Changed
<input type="checkbox"/> Disk Fail	<input type="checkbox"/> When Channel's Configuration Changed
<input type="checkbox"/> When Camera Connection Status Changed	

Trigger Actions	
<input type="checkbox"/> E-Mail:	E-Mail Addresses: <input type="text"/> "use "," to separate e-mails
<input type="checkbox"/> FTP	Upload Path: <input type="text"/>
<input type="checkbox"/> Trigger I/O Output	
<input type="checkbox"/> Buzzer	
<input type="checkbox"/> Move to particular preset points	

Select Channels to Enable Event Trigger and which type of event should be triggered

- Use the checkbox to enable event trigger on the desired channels

Event Handling Setting																
When Channel is triggered by																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	<input type="checkbox"/>					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								
Motion Detection	<input type="checkbox"/>					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								
Custom Event	<input type="checkbox"/>					<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>								

*Please make sure you have properly enabled and configured motion

* Once motion detection is enabled in this page, please configure the motion area and enable motion detection in the corresponding channels (cameras). The NVR only detects the first motion area set in the camera. The NVR recognizes the first motion area by its ID number set in the camera.

* Enabling the "custom event" option allows the NVR to receive events from the CMS software; events such as the intelligent video detection in the CMS.

- Define which system events should trigger the recorder to send out notifications

When SVR-116 is Triggered by

- Recycle
- When SVR-116 Shuts down
- Disk Full
- When SVR-116 Configuration Changed
- Disk Fail
- Camera Configuration Changed
- When SVR-116 Starts up

- Define how the notifications will be sent and where they will be sent to

Trigger Actions

- E-Mail:** E-Mail Addresses: *use "," to separate e-mails
 - FTP** Upload Path:
 - Trigger I/O Output**
 - Buzzer**
 - Move to particular preset points**
-

* *Event trigger may not work for cameras that are placed outside of your local network or on the Internet until the "UPnP Port Forwarding" is enabled in both the NVR and the router.*

3.4 Recording Configurations

The "recording configurations" gives users the overall control of how and when a recording is performed and the quality of different types of recordings performed on each channels. It can help the recorder to operate with sufficient system resource by performing recording only when it's necessary with adjustable recording frame rate.

3.4.1 General Settings

You can define the following in "General Settings":

- Pre-Alarm/Post-Alarm recording length
- Recording frame rate
- Define to always keep a number of days of previously recorded data
- Enable/disable different recording types on different cameras
- Enable/disable audio recording

SEENERGY SVR-116 Network Video Recorder

Main View | Google Map Monitor | Local MAP Monitor | NVR Setup | Channel Status
System Time: January 06, 2010 13:48:55
User: adm

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
 - General Setting
 - Schedule Recording Setting
- System Options

Recording General Settings

Recording Buffer

Pre-Alarm Buffer: 0 Seconds
Post-Alarm Buffer: 5 Seconds

Recording Frame Rate

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	1	1														
Schedule	5															
Event	Full	Full														
Manual	Full	Full														

Keep Video

Keep the previous 0 days of recorded videos

Camera Recording Setting

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>														
Schedule	<input type="checkbox"/>	<input type="checkbox"/>														
Event	<input type="checkbox"/>	<input type="checkbox"/>														

Record Audio

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Record audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>														

Apply Cancel

The "recording buffer" allows user to define "pre-alarm" and "post-alarm" time for event recordings. The "pre-alarm" time sets the NVR to record in advance when an event is triggered. The "post-alarm" time sets the NVR to continue recording for a period of time after an event trigger is finished.

Recording Buffer

Pre-alarm Buffer: sec
 Post-alarm Buffer: sec

** The "Pre-alarm" function only works when the "Continuous" recording is also activated.*

Recording frame rate allows you to set different frame rate for different types of recording instead of recording at one frame rate only. Use the drop-down menu and select one of the pre-defined frame rates for a particular recording type

Recording Frame Rate

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	1	I Only	1	I Only	1											
Schedule	5	I Only	5	I Only	5											
Event	Full	Full	Full	Full	Full											
Manual	Full	Full	Full	Full	Full											

Users can also set to keep a previous number of days of recording data by enabling the option below. This is quite often used in application such as banking which certain countries requires to always keep a minimum previous number of days of recording data.

Keep Video

Keep the previous days of recorded videos

** If this option is enabled, once the hard drive is full, the recycle function will then start but it will ensure that the number of days of recording data defined here will stay in hard drive instead of wiping out 20GB of data at a time.*

** If the hard drive is not full, the NVR re-calculates twice a day (each at 2:30am and 2:30pm) to keep the defined number of days of recording data from these two particular point of time backward.*

The "Camera Recording Setting" section allows you to turn on or off a particular recording type on any channels.

Camera Recording Setting

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	<input type="checkbox"/>															
Schedule	<input type="checkbox"/>															
Event	<input type="checkbox"/>															


The section at the bottom of the page allows you to disable audio recording (record video only) of particular channels.

Record Audio

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Record audio	<input type="checkbox"/>															

3.4.2 Schedule Recording

Here you can define the time range of the schedule recording for all channels.

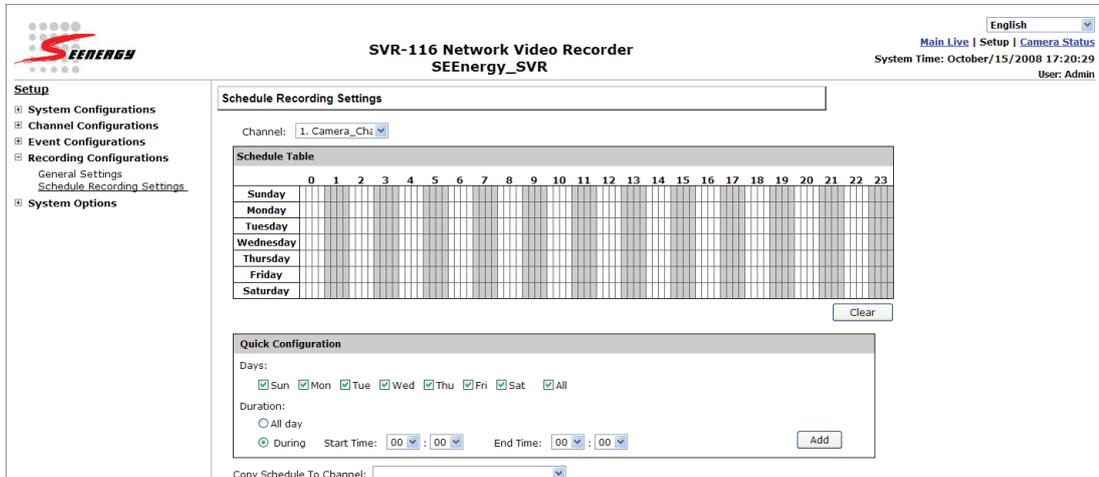

To configure a schedule recording:

1. Use the "Channel" drop-down menu and select a camera first

Channel:

2. You can use the schedule table to set the time range. Click the cell boxes then move horizontally lets you set what hours to perform recording during a day. Click and move vertically lets you set what days to perform recording at a specific time.

Schedule Table																								
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sunday																								
Monday																								
Tuesday																								
Wednesday																								
Thursday																								
Friday																								
Saturday																								

* Each cell box represents 15 minutes of time. Click one or more boxes to omit consecutive recording

3. You can also use the "Quick Configuration" to define recording time range instead of clicking cell boxes one by one on the time table. Simply check what days you would like to perform recording and specify the recording duration by either choosing "All Day" or enter a start and end time for specific recording duration.

Quick Configuration

Days

Mon. Tue. Wed. Thur. Fri. Sat. Sun.

Duration

All day

During Start Time: End Time:

4. Select the "Copy to" option if you would like to set the same recording schedule to another camera.

During Start Time: : End Time:

Copy Schedule To Channel:

3.5 System Options

System Options gives users a glance of the overall system status and allows users to perform maintenance tasks such as upgrading firmware, restore/backup device settings or reboot deviceetc.

3.5.1 Device Information

The "Device Information" provides the general information of the device such as firmware version and system time. It also provides information of the current network settings and status.

Setup

- ▣ System Configuration
- ▣ Channel Configuration
- ▣ Event Configuration
- ▣ Recording Configuration
- ▣ System Options
 - [Device Information](#)
 - System Logs
 - Maintenance
 - DO Status
 - Disk Status
 - UPS Configuration

General Information
Device Name: tst Model Name: SVR-116 Firmware Version: 1.2.0.30014714 Device Time: Up 0 days 16:56:55, since May 05 2009 18:56:23
Network Information
Network Type: DHCP Device IP: 192.168.102.2 HTTP Port: 80 Streaming Port: 9877 MAC Address: 00:28:68:78:31:03 DHCP Server: Disabled UPnP Port Forwarding: Disabled
Current DHCP Clients

3.5.2 Logs and Reports

“Logs and Reports” keeps a record of what’s been happening to the device and provides basic information for troubleshooting

SVR-116 Network Video Recorder
SEEnergy_SVR

English | Main Live | Setup | Camera Status | System Time: October/15/2008 17:22:37 | User: Admin

Setup

- System Configurations
- Channel Configurations
- Event Configurations
- Recording Configurations
- System Options
 - Device Information
 - Logs and Reports
 - Maintenance
 - DO Status
 - Disk Status

Logs and Reports

```

2008/10/13 17:26:34.101 - MOTL_init starting count=1
2008/10/13 17:26:34.102 - Init global variable success
2008/10/13 17:26:34.111 - MCT_initialize success
2008/10/13 17:26:34.220 - MPM_InitMemPoolMedia success
2008/10/13 17:26:34.221 - MvInitHw success
2008/10/13 17:26:34.222 - mctl_init_HandleHwDevice begin->
2008/10/13 17:26:34.223 - success<-end mctl_init_HandleHwDevice
2008/10/13 17:26:34.226 - StreamingClient_ModuleBegin success
2008/10/13 17:26:34.228 - MCB_StartDB success
2008/10/13 17:26:34.228 - SVR set server port 9877
2008/10/13 17:26:34.303 - MCT_Initial success
2008/10/13 17:26:34.303 - mctl_EventServerActionThread name=mctlEventPackThread 0 begin->
2008/10/13 17:26:34.312 - mctl_EventServerActionThread name=mctlEventPackThread 1 begin->
2008/10/13 17:26:34.320 - mctl_EventServerActionThread name=mctlEventPackThread 2 begin->
2008/10/13 17:26:34.329 - mctl_EventServerActionThread name=mctlEventPackThread 3 begin->
2008/10/13 17:26:34.339 - mctl_EventServerActionThread name=mctlEventPackThread 4 begin->
2008/10/13 17:26:34.348 - mctl_EventServerActionThread name=mctlEventPackThread 5 begin->
2008/10/13 17:26:34.357 - mctl_EventServerActionThread name=mctlEventPackThread 6 begin->
2008/10/13 17:26:34.367 - mctl_EventServerActionThread name=mctlEventPackThread 7 begin->
2008/10/13 17:26:34.375 - mctl_EventServerActionThread name=mctlEventPackThread 8 begin->
2008/10/13 17:26:34.383 - mctl_EventServerActionThread name=mctlEventPackThread 9 begin->
2008/10/13 17:26:34.392 - mctl_EventServerActionThread name=mctlEventPackThread10 begin->
2008/10/13 17:26:34.400 - mctl_EventServerActionThread name=mctlEventPackThread11 begin->
2008/10/13 17:26:34.411 - mctl_EventServerActionThread name=mctlEventPackThread12 begin->
2008/10/13 17:26:34.418 - mctl_EventServerActionThread name=mctlEventPackThread13 begin->
2008/10/13 17:26:34.426 - mctl_EventServerActionThread name=mctlEventPackThread14 begin->
2008/10/13 17:26:34.436 - mctl_EventServerActionThread name=mctlEventPackThread15 begin->
2008/10/13 17:26:34.444 - mctl_EventServerActionThread name=mctlEventPackThread16 begin->
2008/10/13 17:26:34.452 - mctl_EventServerActionThread name=mctlEventPackThread17 begin->
2008/10/13 17:26:34.460 - mctl_EventServerActionThread name=mctlEventPackThread18 begin->
2008/10/13 17:26:34.469 - mctl_EventServerActionThread name=mctlEventPackThread19 begin->
2008/10/13 17:26:34.484 - mctl_On_Req_OGI_ResetAllDeviceEvent begin->
2008/10/13 17:26:34.485 - [1] clean all event condition and action
2008/10/13 17:26:34.486 - [2.1] separate baseevent parameter
2008/10/13 17:26:34.488 - [2.2.1] set camera event condition and action parameter
2008/10/13 17:26:34.488 - [2.2.2] set svr event condition and action parameter
    
```

3.5.3 Maintenance

“Maintenance” provides functions for users to:

- Reboot the NVR when necessary
- Reboot cameras directly from the NVR
- Perform Firmware Upgrade
- Backup the NVR’s settings to a local hard drive
- Restore the NVR’s settings from a previously saved configuration file
- Reset the NVR’s settings to their factory default values

SVR-116 Network Video Recorder

Main View | Google Map Monitor | Local MAP Monitor | NVR Setup | Channel Stat | System Time: June 13, 2013 18:04: | User: adm

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Log
 - Maintenance
 - DO Status
 - Disk Status
 - USB Backup
 - UPS Configuration

Maintenance

Restart NVR

Click "Restart" button to restart NVR

[Restart]

Restart NVR Automatically

Select one of the options below:

Restart: [Apply]

Restart Camera

Select a camera below to perform a restart

[Select] [Restart]

Upgrade NVR Firmware

Locate the new firmware and perform the upgrade (Current Firmware Version: 1.7.0.30637262)

Specify the firmware file: [Browse] and click [Upgrade]

*** Note ***: Please DO NOT power off the system during the firmware upgrade process. You will be notified once the upgrade process is complete.

Backup NVR's Setting

Backup the configuration to a local hard disk

[Backup]

Restore NVR's Setting

Restore configuration from a previously saved configuration file

Specify the configuration file: [Browse] and click [Restore]

*** Note ***: Please DO NOT power off the system during the restore process. You will be notified once the process completed.

Reset NVR to Factory Default

This will restore all configurations to their factory default values

[Restore Factory Default] When the DHCP server function is disabled, the default IP of the system is:192.168.101.50

*** Note ***: Please DO NOT power off the system during the reset process. You will be notified once the process is complete.

Replace NVR Web UI Logo


Locate the new logo and perform the updates:

Specify the logo file: [Browse] and click [Upload Image]


Reboot the NVR

Reboot the NVR after you upload a new firmware. You would need to manually reboot the system for the new firmware to take effect. Such process would prevent a recording from getting interrupted because the system would not automatically reboot itself after the new firmware is loaded onto the recorder.

Simply click "Restart" to begin the reboot process and confirm the action:

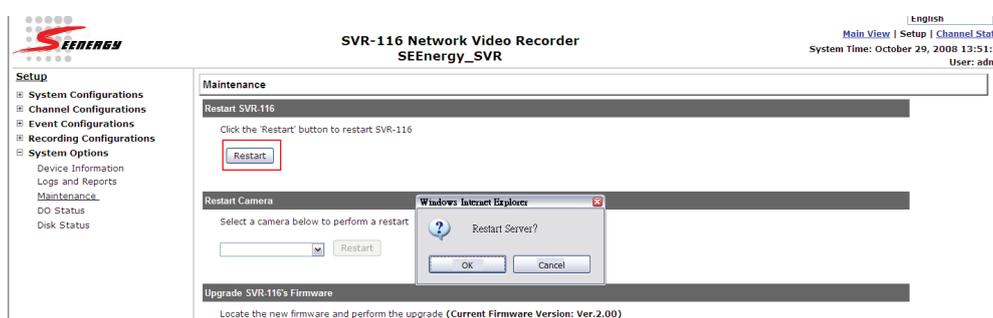

The restart process should be displayed and you should be prompted back to the "Maintenance" page after it is complete:

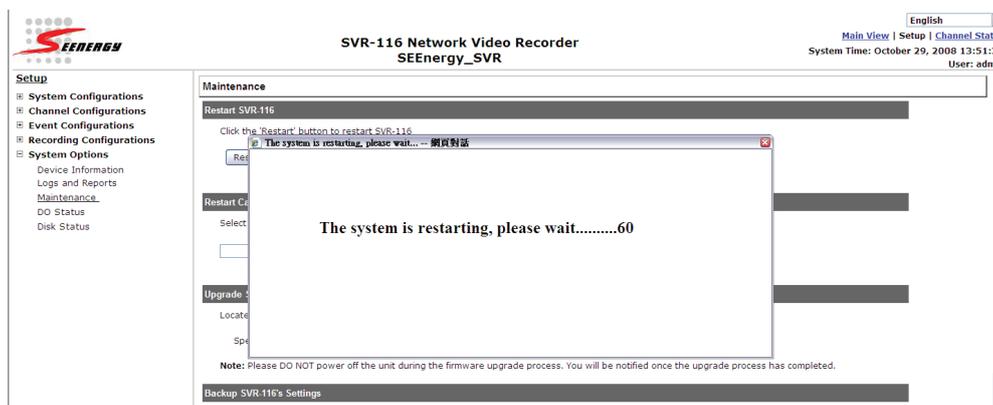

Reboot the NVR at a specific time automatically

You can also configure the NVR to restart automatically by using the options given in the web UI. You can set the NVR to restart at a particular hour of a specific day during a week or a month.

Restart NVR Automatically

Select one of the options below:

Restart:

Restart NVR Automatically

Select one of the options below:

Restart:

Firmware Upgrade

The firmware can be upgraded through web UI or USB. Before upgrading firmware, please backup current configuration first.


**** the firmware file comes with a ".tar.gz" file extension, please use the file as is, DO NOT unzip it. It's normal that you may only see ".tar" as the the ".gz" file extension is hidden by default in Windows. You will get "incorrect file format" error message if the file extension is altered. Certain personal firewall may also cause such problem.**

A. Upgrade through Web UI


1. Login into NVR's web management UI. Go to "Setup" page and go to "System Options"->"Maintenance"

- ⊕ **Recording Configuration**
- ⊖ **System Options**
 - Device Information
 - System Logs
 - Maintenance**
 - DD Status
 - Disk Status

2. On "Upgrade NVR's Firmware" section, click "Browse" and select new firmware file

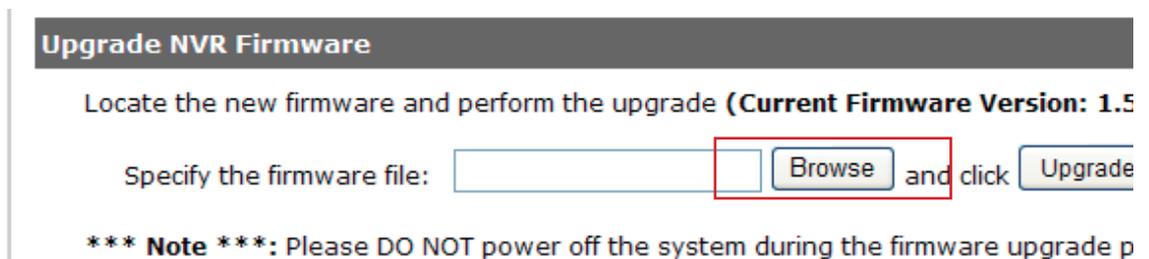


3. A new dialog should display and let you choose the location of the firmware file

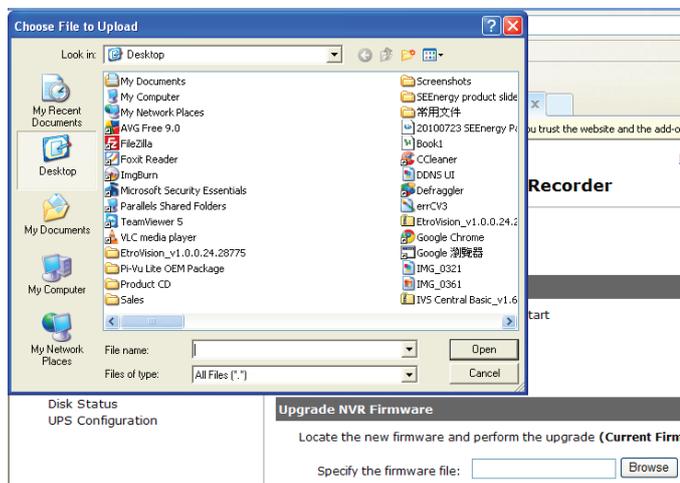

4. When done, click "Upgrade"



ide (Current Firmware Version: 1.5.4.3)

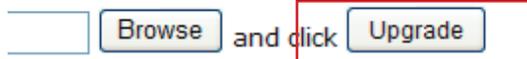

ystem during the firmware upgrade process:


5. Follow the on screen instruction and wait for the process to finish (After upgrade, the system will reboot automatically, it's part of the process)

B. Upgrade through USB


1. Prepare a USB flash disk and format with FAT or FAT32 format
2. Place the firmware in the USB flash disk and make sure it's placed at the top-level directory. Please do not place the file in a folder. **(make sure to change the firmware file name to "firmware" and leave its file extension ".tar.gz" as is before placing the file to the USB disk)**
3. Plug USB flash disk into USB port on the NVR
4. The Status LED on the NVR will start to flash in amber. This indicates firmware upgrade is in process
5. *** Warning *** Please wait until upgrade process finished, interrupt the upgrade process may cause system not work anymore
6. Wait until Status LED flashes in green. This indicates firmware upgrade is finished
7. Power off the NVR and remove the USB disk the power the unit back on again
8. Restore configuration file back if needed

Reset the NVR to Factory Default

To reset the recorder back to its factory default, click "Default" button and begin the process:

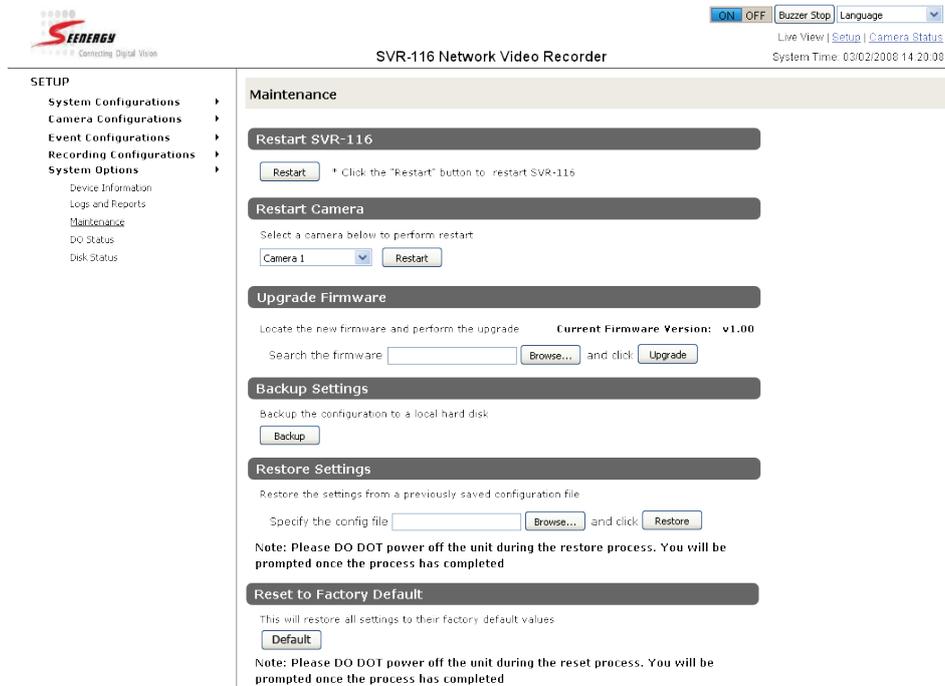


The process should be displayed and you should be prompted back to the "Live View" page after it is complete:

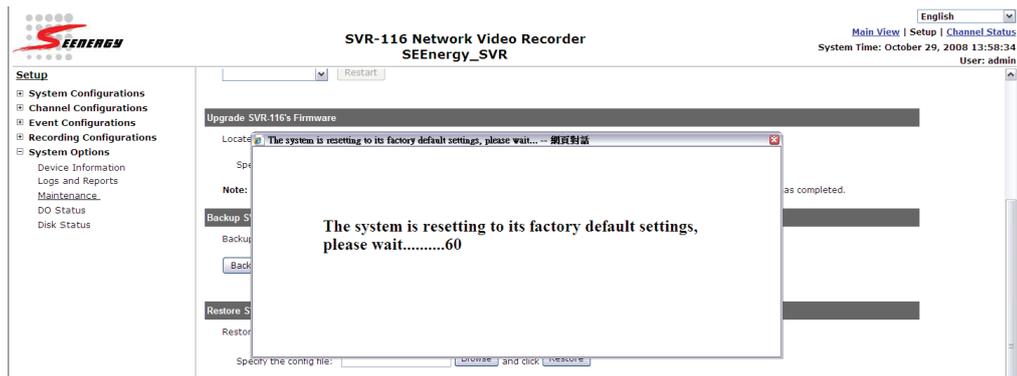


3.5.4 DO Status

This is where you can get the current status of the NVR's digital output ports. You can also change their status from this page.

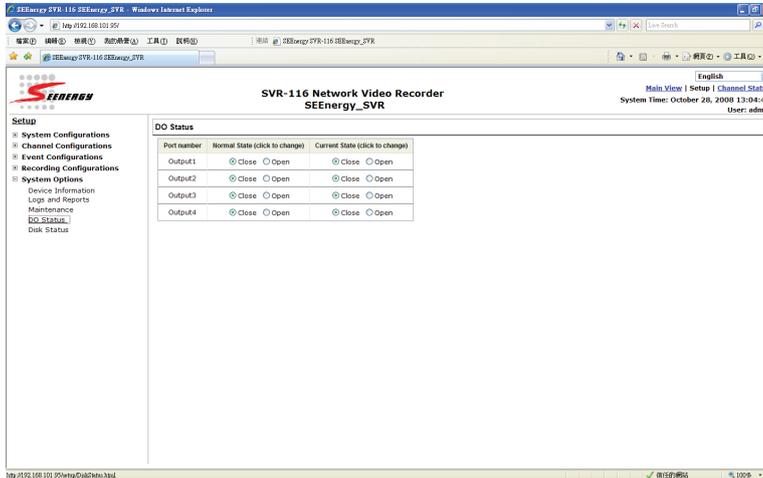

3.5.5 Disk Status

“Disk Status” gives you a more detailed information of the hard drive that is currently installed in the NVR.

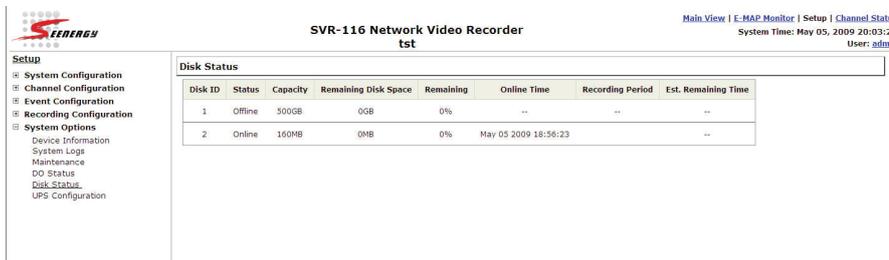

3.5.6 USB Backup

It's a function that allows users to backup the recording data in its database file format (not AVI) to the externally connected USB hard disk.

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Logs
 - Maintenance
 - DO Status
 - Disk Status
 - USB Backup
 - UPS Configuration

USB Backup


USB HDD: * Please format the HDD to FAT32 on a V

LN24001 LNE3003 LNE1001
 Channel 5 v1.0.0.5-2 Channel 7
 Channel 9 Channel 10 Channel 11
 Channel 13 Channel 14 Channel 15

Start Time: : :

End Time: : :

Insert a USB hard disk that has more than 100MB free space to the NVR

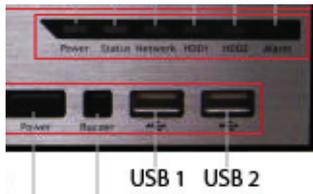

You can check the "Disk Status" page under "System Options" to see if the USB disk has been detected by the NVR

Disk Status						
Disk ID	Status	Capacity	Remaining Disk Space	Remaining	Online Time	
HDD 1	Online	222GB	216GB	97%	Aug 12 2010 11:21:12	Ma Au
USB HDD 1	Online	1935MB	553MB	28%		

Once it's detected, go back to the "USB Backup" page and it should be available for further configuration

USB Backup

USB HDD: USB HDD 1, 553MB available ▾ * Please format the HDC

Channel:

<input checked="" type="checkbox"/> LNZ4001	<input checked="" type="checkbox"/> LNE3003
<input type="checkbox"/> Channel 5	<input type="checkbox"/> v1.0.0.5-2
<input type="checkbox"/> Channel 9	<input type="checkbox"/> Channel 10
<input type="checkbox"/> Channel 13	<input type="checkbox"/> Channel 14

Start Time: May 21, 2010 ▾ 16 : 52 : 02 ▲ ▾

End Time: May 21, 2010 ▾ 16 : 52 : 02 ▲ ▾

The USB hard disk(s) will be listed in the drop-down menu displaying the remaining disk space. Make your selection from the drop-down menu if you have more than one disks connected to the NVR

USB Backup

USB HDD: USB HDD 1, 553MB available ▾ * Please format the HDC

Channel:

<input checked="" type="checkbox"/> LNZ4001	<input checked="" type="checkbox"/> LNE3003
<input type="checkbox"/> Channel 5	<input type="checkbox"/> v1.0.0.5-2

Next, select channels which you would like to backup the recording data from. Maximum 4 channels can be selected at once.

USB HDD: USB HDD 1, 553MB available ▾ * Please format the HDC

Channel:

<input checked="" type="checkbox"/> LNZ4001	<input checked="" type="checkbox"/> LNE3003
<input type="checkbox"/> Channel 5	<input type="checkbox"/> v1.0.0.5-2
<input type="checkbox"/> Channel 9	<input type="checkbox"/> Channel 10
<input type="checkbox"/> Channel 13	<input type="checkbox"/> Channel 14

Configure the start and end time of the recording data you would like to backup and click the "Backup" button to begin

Start Time: May 21, 2010 ▾ 16 : 52 : 02 ▲ ▾

End Time: May 21, 2010 ▾ 16 : 52 : 02 ▲ ▾

Things to pay attention to with the USB Backup function:

Limitation:

- It does not support USB Hub extend the number of HDD connected to the NVR
- Only one backup process can be performed at a time
- Maximum 4 channels can be selected for backup
- Only FAT32 USB hard disk is supported for backup
- The USB hard disk needs to have more than 100MB remaining space
- If multiple partitions are presented in one disk, only the first partition will be detected and used for backup

Process:


- Progress will be displayed on the UI
- If the backup process gets interrupted, which the process stops at a point of time that is before the "END Time" user defined, such time will be displayed on the UI
- A folder will be automatically created in the USB hard disk with a name format like 0028687831_20100610151515_20100605110010_20100606110010 (MAC_backupbuttonclicktime_starttime_endtime)

Note:


- Please plug in the USB HDD only after the NVR is fully started, or the HDDs will be incorrenctly mounted.

Play the backup file with the NVR Media Player


The backup files can be played with the NVR media player. To do, open the player and select "Open" >> "Media Database"

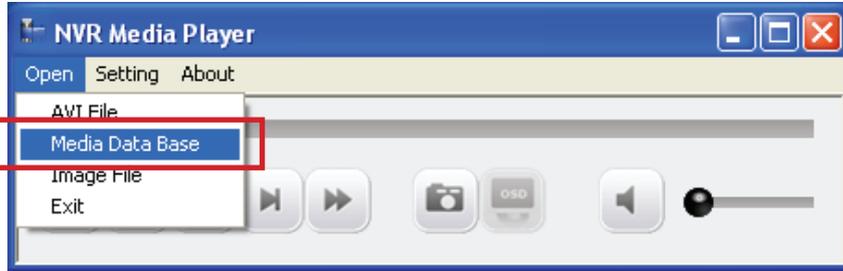


Click "Browse..." to select the file from the USB disk

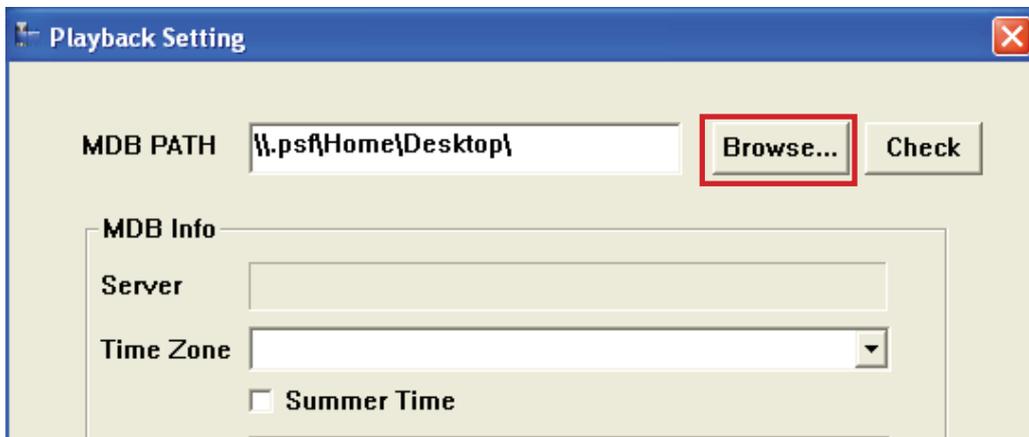


A new dialog should be prompted for you to select the file location

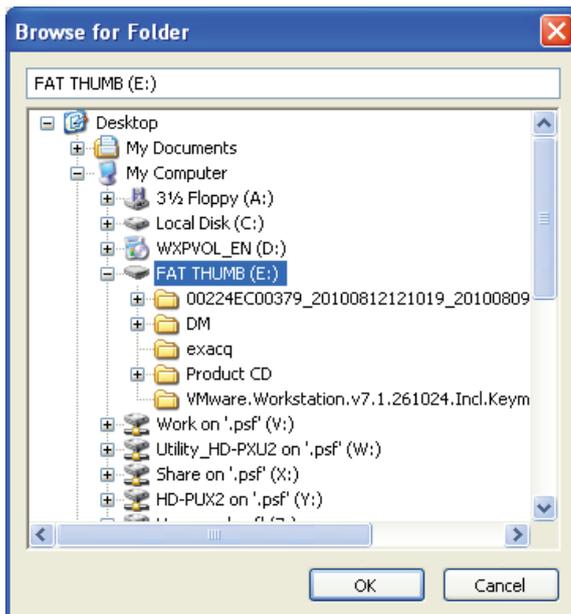

When done, click "Check" to validate the file

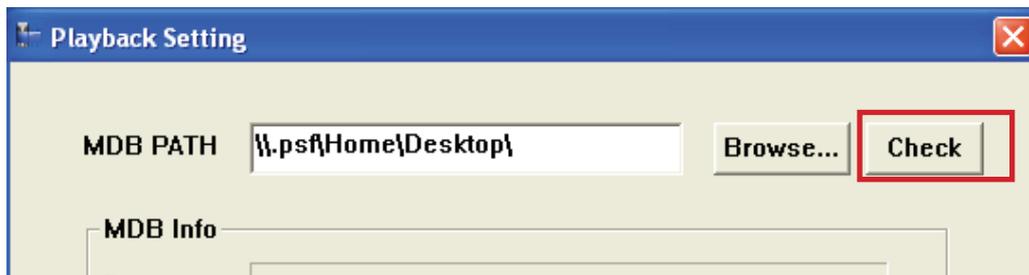

Once the file has been successfully verified, you should be prompted with the message shown below

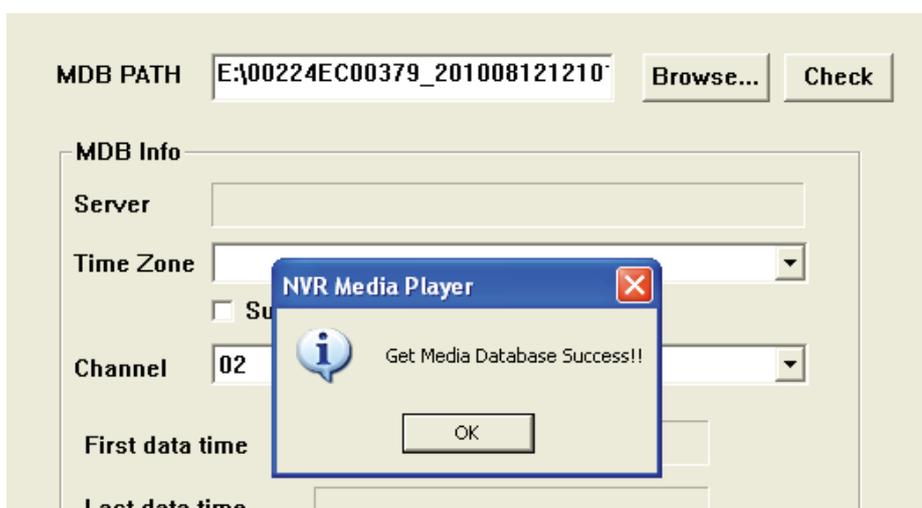

Select the time zone according to your current location



Finally, click "OK" to begin playing


The player should now play the backed up file




3.5.7 UPS Configuration

Connect the UPS to the NVR's DI/DO port for sending and receiving signals between the UPS and the NVR. Refer to the diagram below to connect the UPS with its RS-232 interface to the NVR's DI/DO port.

The NVR can receive signal from the UPS when there is a power failure and shut down itself automatically within a period of time.

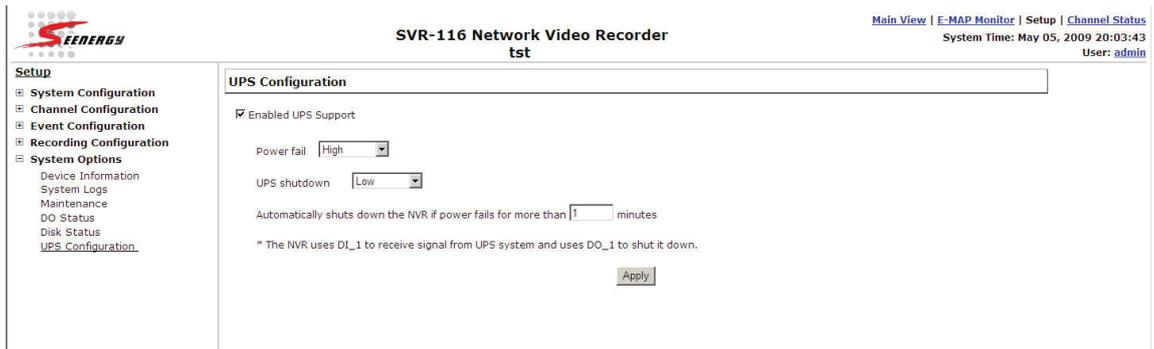

Connect UPS with its RS-232 interface to the NVR's IO port:

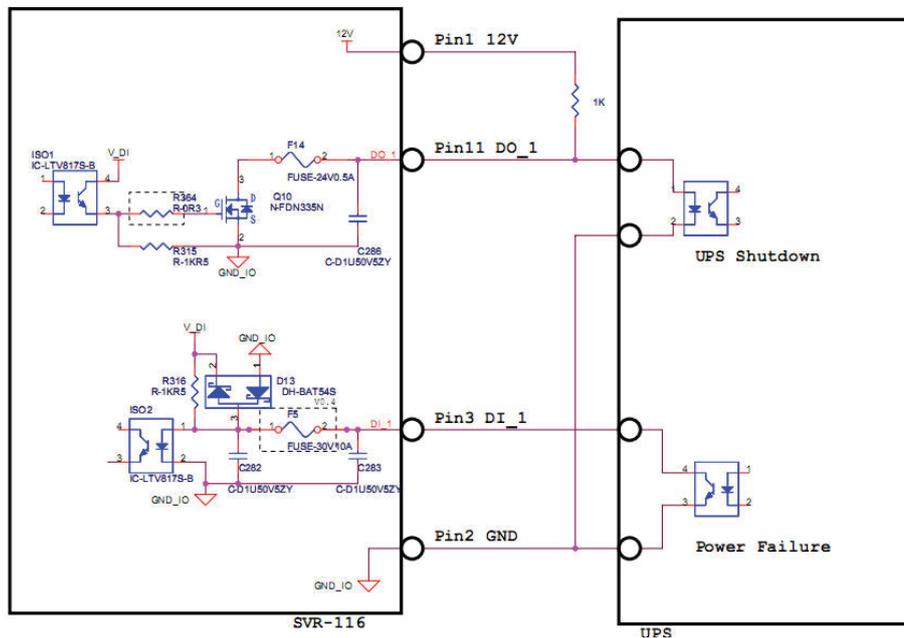

*** The NVR uses DI_1 to receive signal from UPS system and uses DO_1 to shut it down.**

SEEnergy Corp.

4F, No.61, Dongsing RD.,
Taipei 110, Taiwan, R.O.C.

Tel: 886-2-8768-1518

Fax: 886-2-8787-8560

E-mail: sales@seenergy.com.tw

www.seenergy.com.tw

