

# How to upgrade firmware for VigorPhone


---

1. For the firmware version before 12202.26.01.07, please click the following link to download the firmware 12202.26.01.07H\_1FULL first and follow the steps listed below to carry out the firmware upgrade;

<http://www.draytek.com/user/SupportDownloadsDetail.php?action=Load&MID=129&ID=395>

For the firmware version of 12202.26.01.07H or later, please follow the step 2 listed below to carry out the firmware upgrade for VigorPhone through the Web page directly.

2. Next, access into the web user interface of VigorPhone and open **System Settings >> Firmware Upgrade**. Choose the latest firmware and click **OK**.
3. Download the **Router Tool** from DrayTek website, <http://www.draytek.com/user/SupportDLUtility.php> and install the tool onto your computer.
4. Connect your computer with VigorPhone by LAN port/PoE port. Configure your computer with Static IP by entering the following information.  
IP address: 192.168.1.10  
Subnet mask:255.255.255.0  
Gateway:192.168.1.1
5. Make sure the network connection between your computer and VigorPhone is stable, then cut off the power of VigorPhone (unplug the power cord).
6. Press and hold **ENTER** and **MENU** keys and plug the power cord of VigorPhone.
7. When VigorPhone restarts, a message of **AUTO UPGRADE Wait for Image** will be displayed on the screen of VigorPhone. If the message of **AUTO UPGRADE TFTP Fail** appears, it indicates the connection between the computer and VigorPhone is failed. Please redo the work of Step 5.
8. Open **Start>>Programs>>Router Tools>>Firmware Upgrade Utility**. Type 192.168.1.2 in the field of **Router IP**. After selecting the correct firmware, please type the login password of VigorPhone and click **Send**.

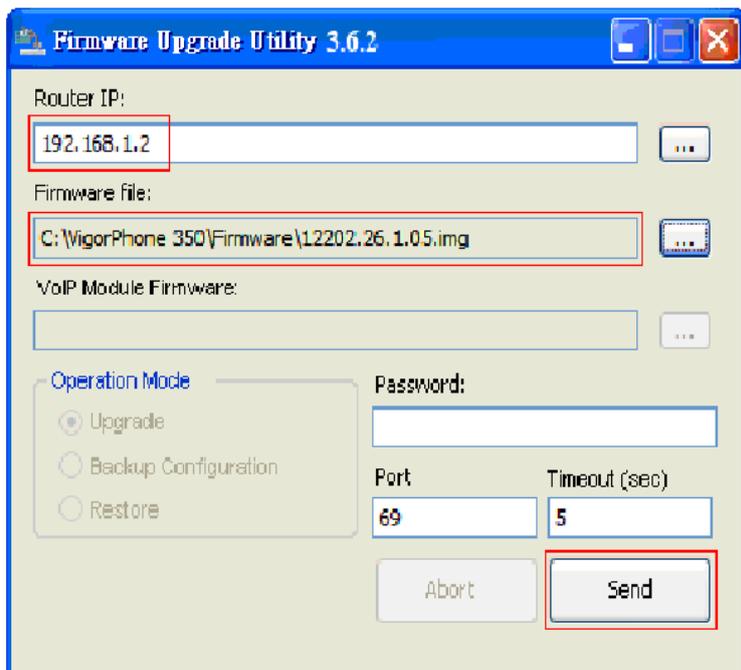

**Note:** To select the firmware, please set the file format with \*.\*. Otherwise, you cannot find out the file.

9. After clicking **Send**, the following words will be shown on the screen of VigorPhone one by one.

**AUTO UPGRADE Upgrade rootfs**

**AUTO UPGRADE Upgrade kernel**

**AUTO UPGRADE Upgrade Phone**

**AUTO UPGRADE Upgrade Successful boot**

10. Later, VigorPhone will restart automatically. When it restarts successfully, that means the firmware upgrade has finished.